


Air Handler Indoor Unit Service Manual

Unit Model: SGT-ZVMXFA-18HIN4-M-SE15
SGT-ZVMXFA-24HIN4-M-SE15
SGT-ZVMXFB-30HIN4-M-SE15
SGT-ZVMXFB-36HIN4-M-SE15
SGT-ZVMXFC-48HIN4-M-SE15
SGT-ZVMXFC-60HIN4-M-SE15

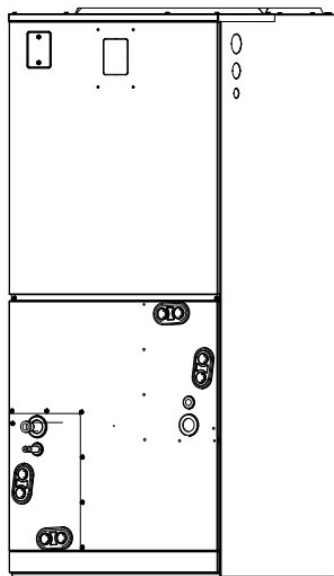

RECOGNIZE THIS SYMBOL AS A SAFETY PRECAUTION

ATTENTION INSTALLING PERSONNEL

Prior to installation, thoroughly familiarize yourself with this Installation Manual. Observe all safety warnings.

During installation or repair, caution is to be observed.

It is your responsibility to install the product safely and to educate the customer on its safe use.

Part 1

General Information




1 Product lineup2

2 Specifications 3

3 Dimensional drawings 4

4 Layout Functional Components 5

1 Product lineup


Model	Cooling Capacity (Btu/h)	Heating Capacity (Btu/h)	Appearance
SGT-ZVMXFA-18HIN4-M-SE15	18000	19000	
SGT-ZVMXFA-24HIN4-M-SE15	23000	26000	
SGT-ZVMXFB-30HIN4-M-SE15	30000	31000	
SGT-ZVMXFB-36HIN4-M-SE15	34200	36000	
SGT-ZVMXFC-48HIN4-M-SE15	48000	48000	
SGT-ZVMXFC-60HIN4-M-SE15	52500	54000	

2 Specifications

Model			SGT-ZVMXFA-18HIN4-M-SE15	SGT-ZVMXFA-24HIN4-M-SE15	SGT-ZVMXFB-30HIN4-M-SE15
Power supply	Rated Voltage	V, Ph, Hz	208/230V, 1Ph, 60Hz	208/230V, 1Ph, 60Hz	208/230V, 1Ph, 60Hz
Cooling	Capacity	Btu/h	18000	23000	30000
Heating	Capacity	Btu/h	19000	26000	31000
Indoor MINIMUM CIRCUIT AMPACITY		A	2.1	2.1	2.6
Indoor MAX.FUSE		A	15.0	15.0	15.0
Indoor air flow (H/L)		CFM	576/488	758/629	894/710
Indoor Noise level (H/L)		dB(A)	38.5/34	42/38	40/36
N.A. Design pressure		PSI	174/609	174/609	174/609
Indoor unit	Dimension (WxDxH)	inch	21-1/32x17-33/64x45	21-1/32x17-33/64x45	21-1/32x21-1/32x49-7/32
	Packing Demension (WxDxH)	inch	26-37/64x20-55/64x46-17/64	26-37/64x20-55/64x46-17/64	24-13/32x26-37/64x50-13/64
	Net Weight/Gross Weight	lbs	119/130	121/132	142/157
Refrigerant piping	Liquid side/Gas side	inch	(3/8) / (3/4)	(3/8) / (3/4)	(3/8) / (3/4)
Connecting Wiring		AWG	485: AWG 25*3 Shielded, 24V: AWG 20		
Communication Type			24V / 485	24V / 485	24V / 485
Throttle type			Piston	Piston	Piston
Setting Temperature Range		°F	62~90	62~90	62~90



Model			SGT-ZVMXFB-36HIN4-M-SE15	SGT-ZVMXFC-48HIN4-M-SE15	SGT-ZVMXFC-60HIN4-M-SE15
Power supply	Rated Voltage	V, Ph, Hz	208/230V, 1Ph, 60Hz	208/230V, 1Ph, 60Hz	208/230V, 1Ph, 60Hz
Cooling	Capacity	Btu/h	34200	48000	52500
Heating	Capacity	Btu/h	36000	48000	54000
Indoor MINIMUM CIRCUIT AMPACITY		A	2.6	4.6	5.8
Indoor MAX.FUSE		A	15.0	15.0	15.0
Indoor air flow (H/L)		CFM	1082/864	1350/1150	1500/1050
Indoor Noise level (H/L)		dB(A)	50/42.5	53/46	53/46
N.A. Design pressure		PSI	174/609	174/609	174/609
Indoor unit	Dimension (WxDxH)	inch	21-1/32x21-1/32x49-7/32	24-31/64x21-1/32x52-63/64	24-31/64x21-1/32x52-63/64
	Packing Demension (WxDxH)	inch	24-13/32x26-37/64x50-13/64	27-7/8x26-37/64x54-9/64	27-7/8x26-37/64x54-9/64
	Net Weight/Gross Weight	lbs	142/157	170/186	162/179
Refrigerant piping	Liquid side/Gas side	inch	(3/8) / (3/4)	(3/8) / (3/4)	(3/8) / (3/4)
Connecting Wiring		AWG	485: AWG 25*3 Shielded, 24V: AWG 20		
Communication Type			24V / 485	24V / 485	24V / 485
Throttle type			Piston	Piston	Piston
Setting Temperature Range		°F	62~90	62~90	62~90

3 Dimensional drawings

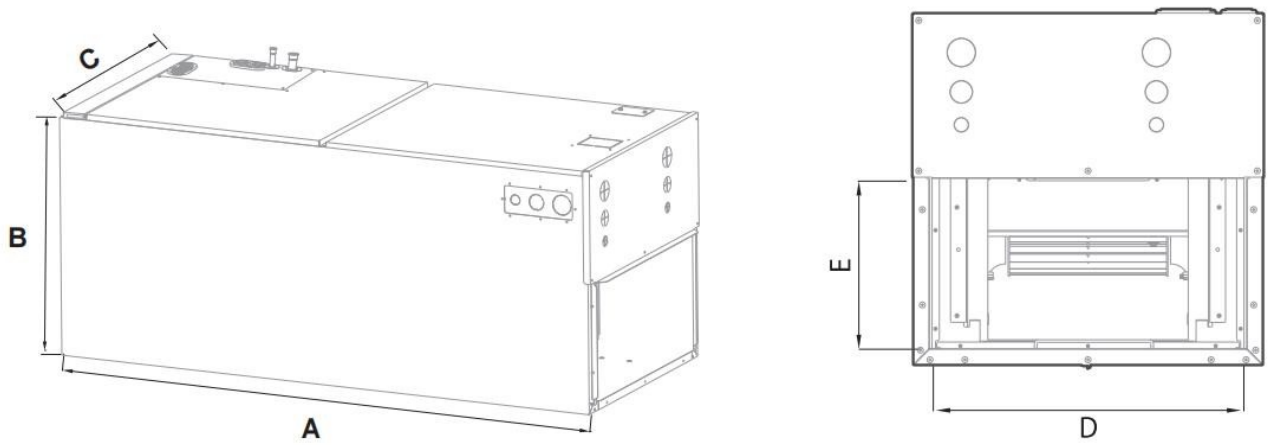

Model (Btu/h)		18/24K	30/36K	48/60K
		Dimensions		
A	mm	1145	1245	1346
	inch	45	49-1/64	52-63/64
B	mm	534	534	534
	inch	21-1/32	21-1/32	21-1/32
C	mm	445	534	622
	inch	17-33/64	21-1/32	24-31/64
D	mm	400	490	580
	inch	15-3/4	19-19/64	22-53/64
E	mm	260	260	260
	Inch	10-15/64	10-15/64	10-15/64

4 Layout Functional Components

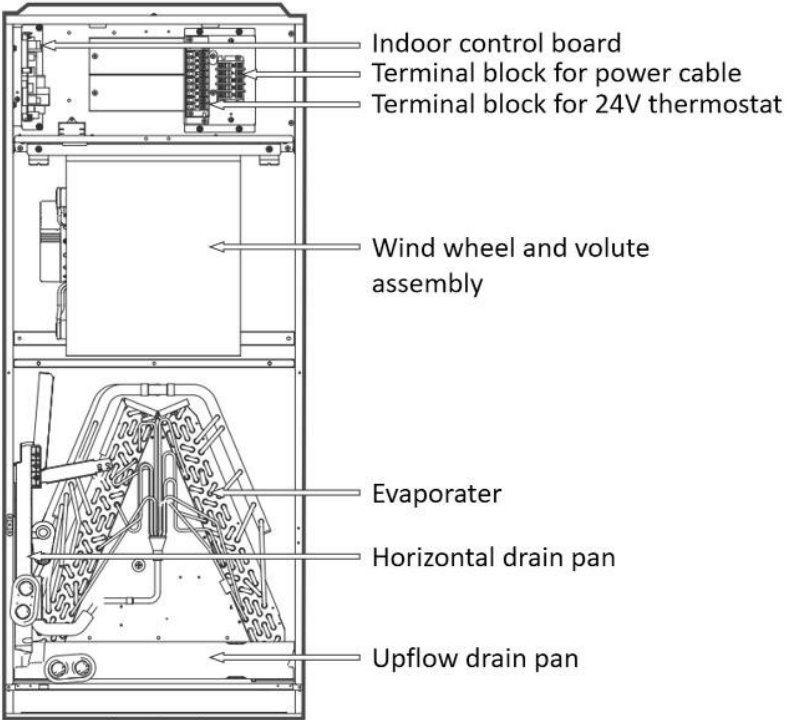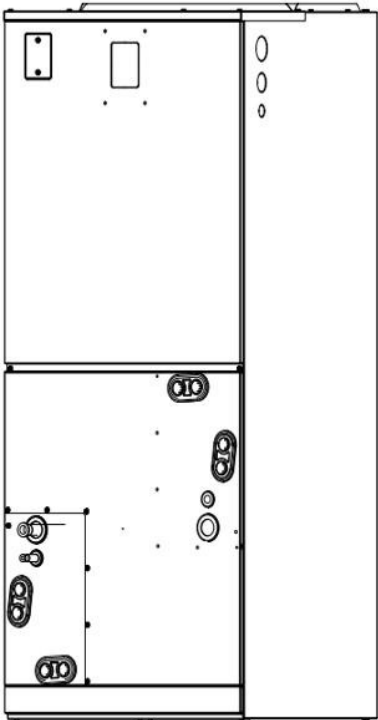


Part 2

Wiring Diagram

1 Electric wiring diagram	7
2 PCB	9
3 Low voltage wiring diagram	10
4 Electrical parameters	15

1 Electric wiring diagram

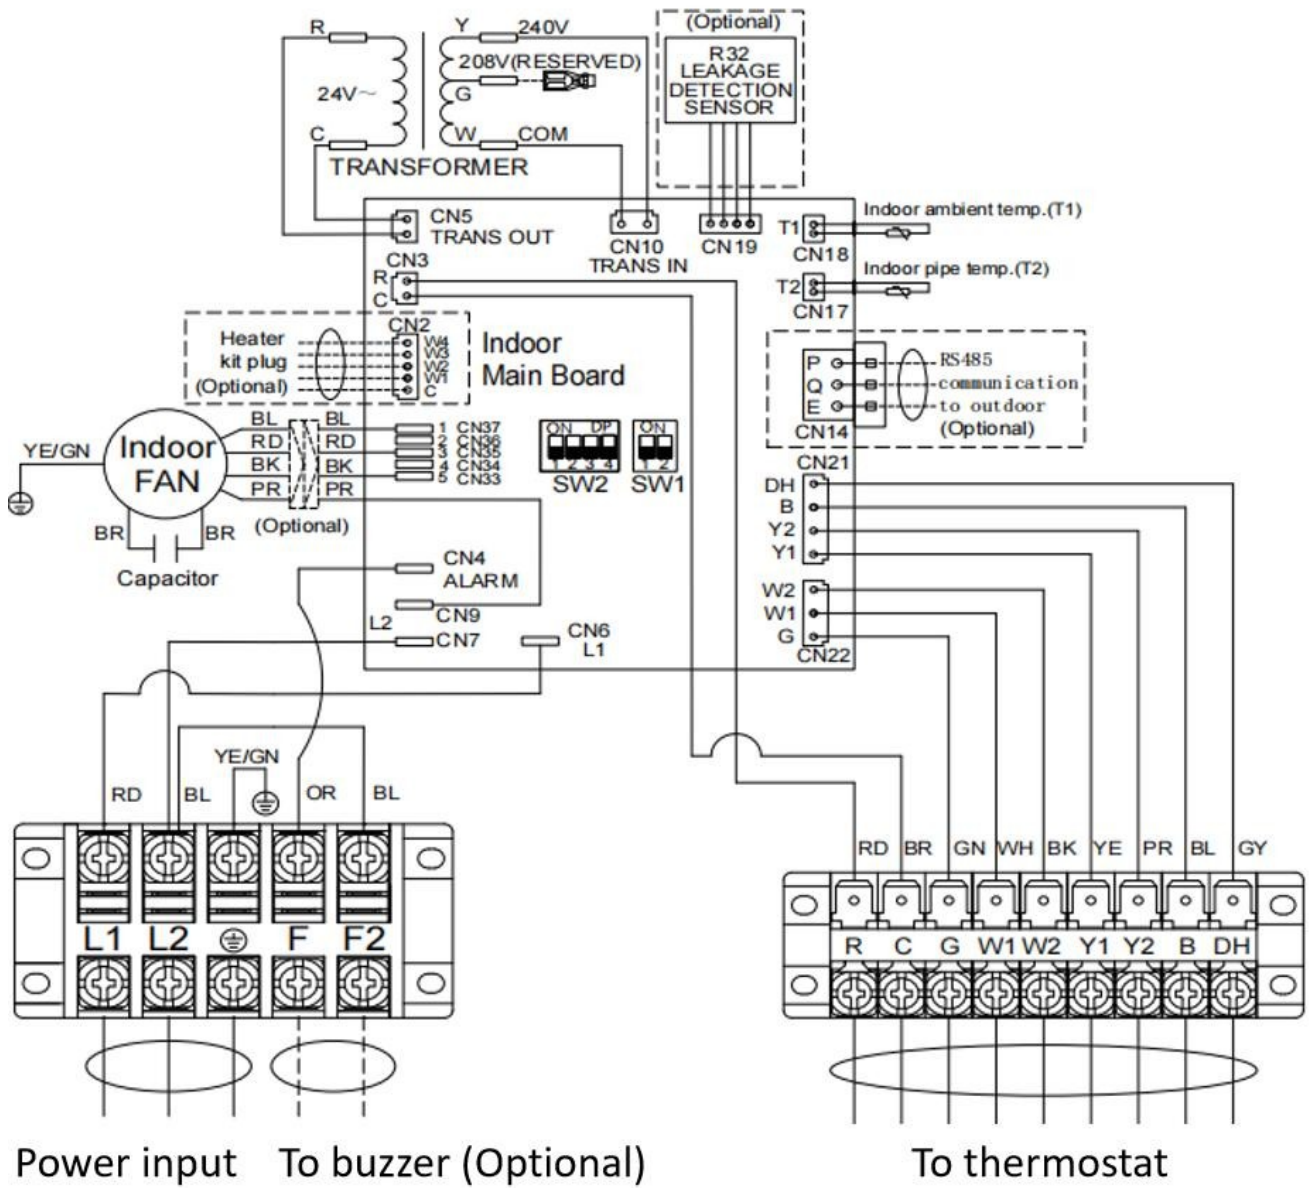


DIP switch status Indicate	
ON <input type="checkbox"/> OFF <input checked="" type="checkbox"/> 1	This Indicate OFF (The DIP switch is dialed to the digital side)
ON <input checked="" type="checkbox"/> OFF <input type="checkbox"/> 1	This Indicate ON (The DIP switch is dialed to the non-digital side)

SW1 DIP switch selection (Indoor FAN speed)			
SW1.1	SW1.2	High speed (Y1+Y2 OR W)	Low speed (Y1 OR G)
OFF	OFF	2	1
OFF	ON	3	1
ON	OFF	4	1
ON	ON	5(Default)	1(Default)

SW2 DIP switch selection		
SW2.1	OFF	24V Control
	ON	RS485 Comm. Mode
SW2.2	OFF	Anti-Cold Air Delay
	ON	Disable Anti-Cold Air Delay
SW2.3	OFF	T1 from main board
	ON	T1 from thermostat
SW2.4	OFF	Indoor AC FAN
	ON	Indoor ECM FAN
Wire Color Code		
RD	RED	OR ORANGE
BL	BLUE	GN GREEN
BR	BROWN	GY GRAY
BK	BLACK	YE YELLOW
WH	WHITE	PR PURPLE

2 PCB

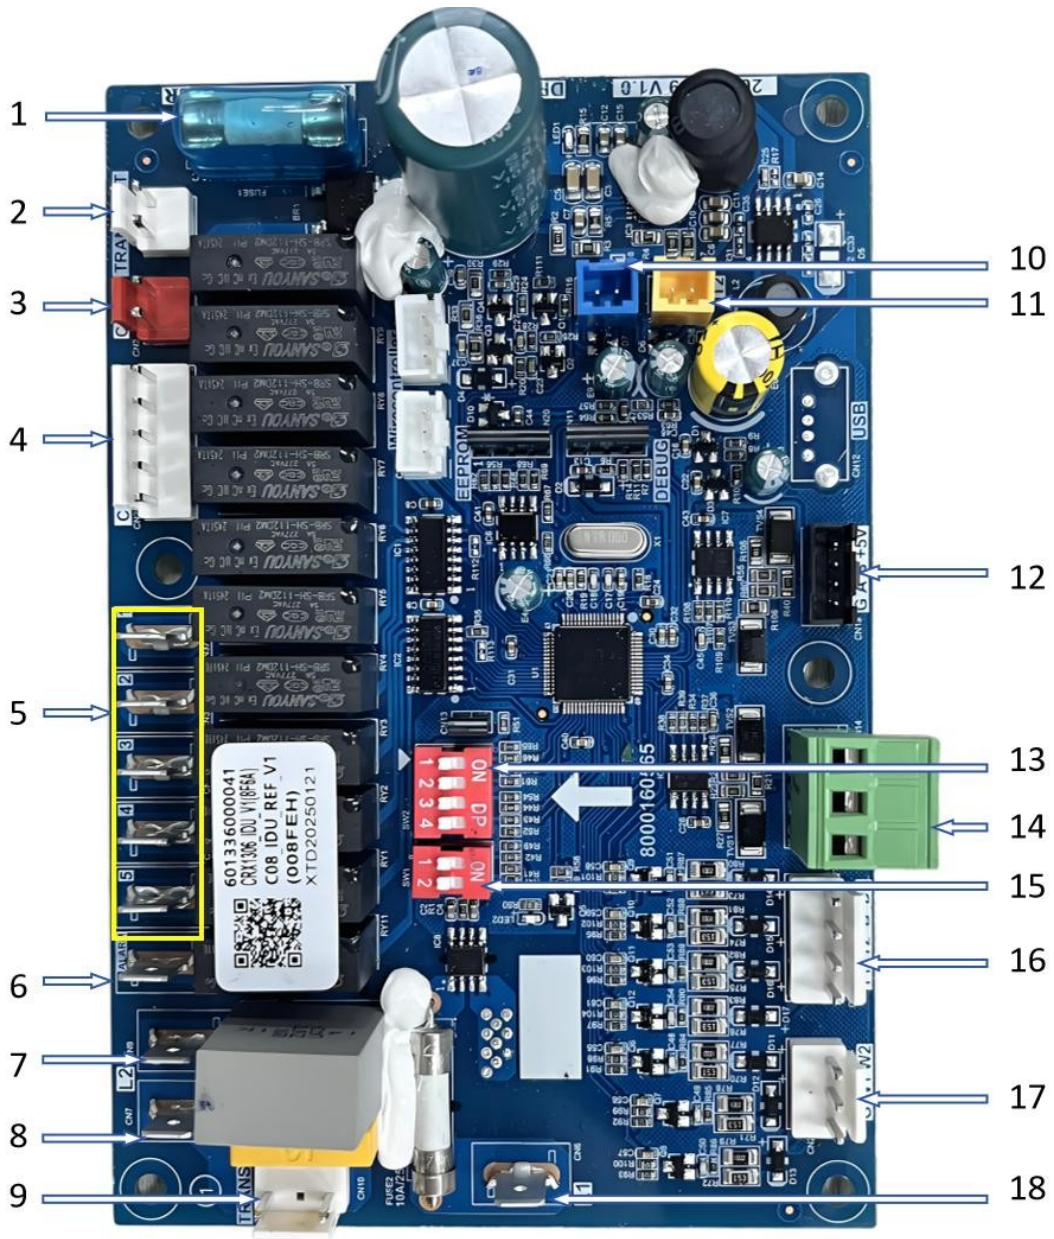


No.	Port Names and Definitions	No.	Port Names and Definitions
1	Fuse	10	Port for room temperature sensor T1
2	24V trans in from transformer	11	Port for indoor coil temperature sensor T2
3	Port to 24V thermostat(R/C)	12	Port for refrigerant concentration monitor
4	Port for electrical heater(reserved)	13	DIP Switch-SW2
5	Port for indoor fan motor	14	RS-485 communication port
6	Connect to "F" terminal of the terminal block	15	DIP Switch-SW1
7	Connect to indoor fan motor(optional)	16	Port to 24V thermostat(DH/B/Y2/Y1)
8	Connect to power supply-L2	17	Port to 24V thermostat(W2/W1/G)
9	220V trans out to transformer	18	Connect to power supply-L1


3 Low voltage wiring diagram

The following wiring diagram are suitable for the Indoor Unit and Outdoor Unit with 24V thermostat.


Wiring for 1H and 1C thermostat (no heat pump system model)

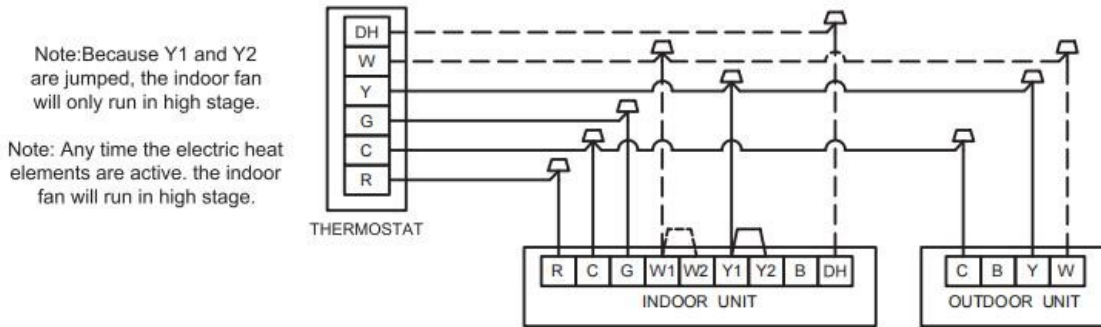


Wiring for 1H and 1C thermostat (no heat pump system model)

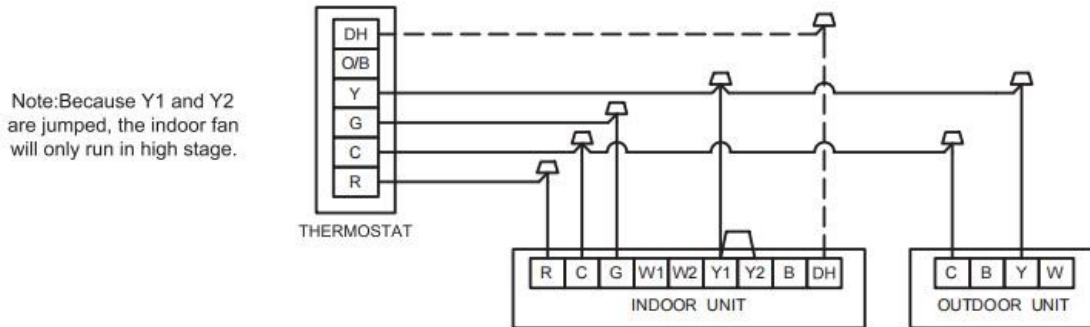


Wiring for 2H and 1C thermostat (no heat pump system model)

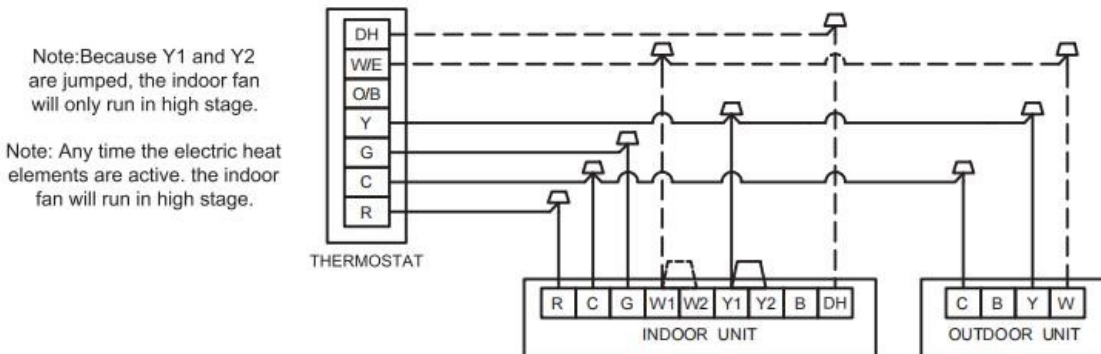


Wiring for 2H and 2C thermostat (no heat pump system model)

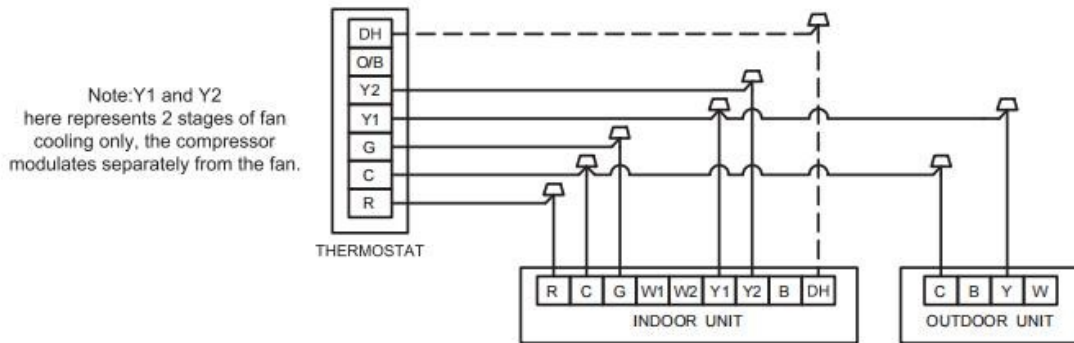


Wiring for 3H and 1C thermostat (no heat pump system model)

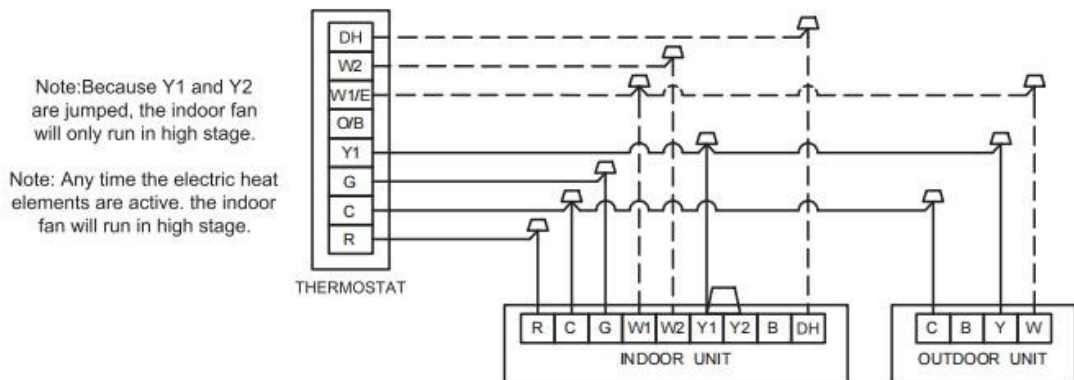

Wiring for 3H and 2C thermostat (no heat pump system model)

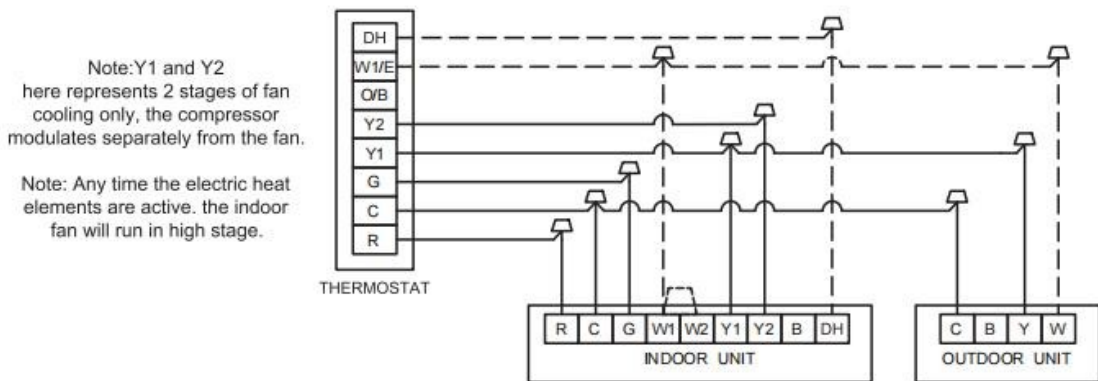


Wiring for 4H and 2C thermostat (no heat pump system model)

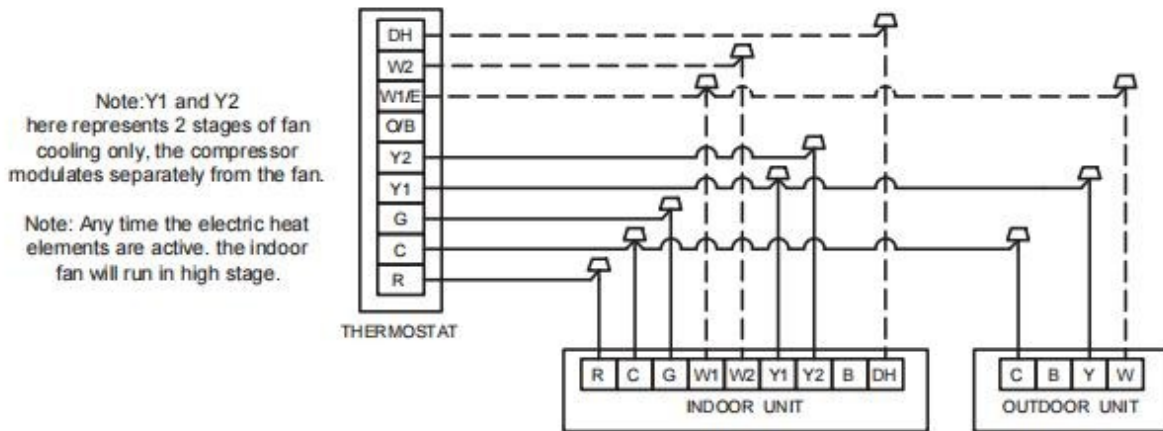


Heat Pump System Model


Wiring for 1H and 1C thermostat (heat pump system model)

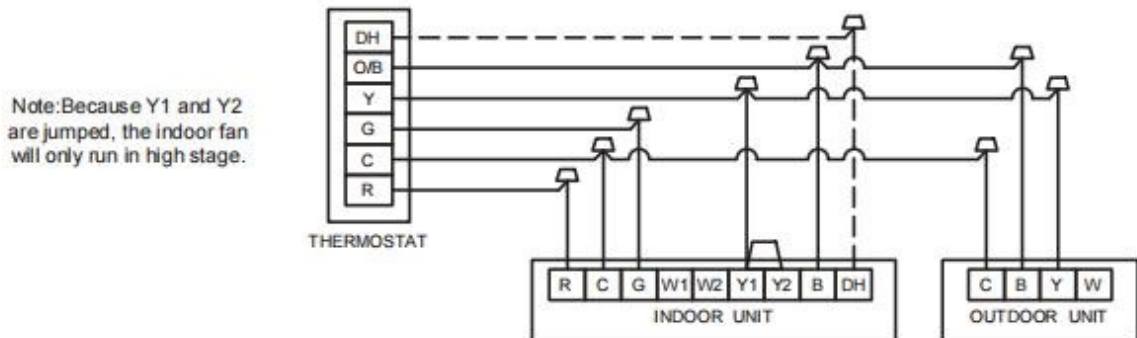


Wiring for 2H and 1C thermostat (heat pump system model)

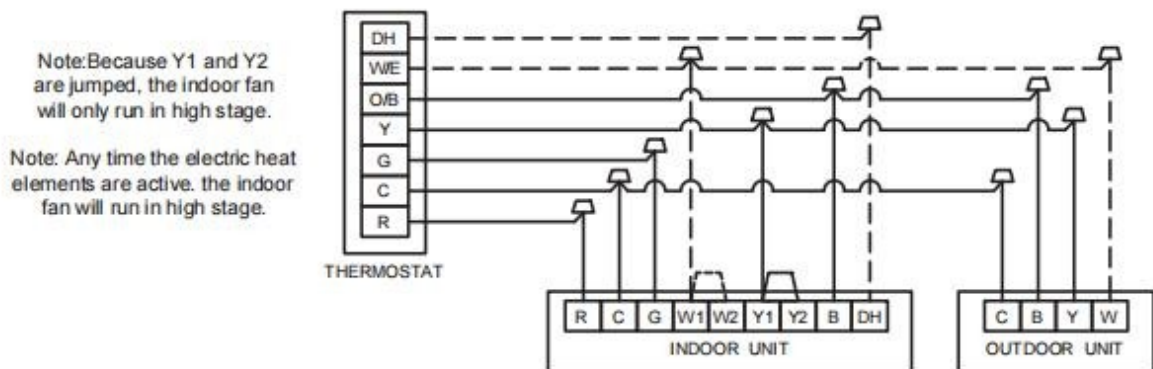


Wiring for 2H and 2C thermostat (heat pump system model)

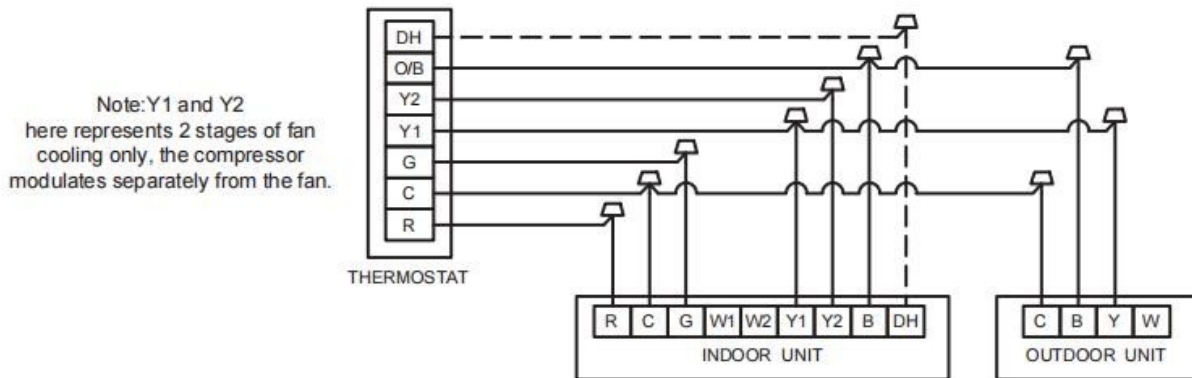


Wiring for 3H and 1C thermostat (heat pump system model)

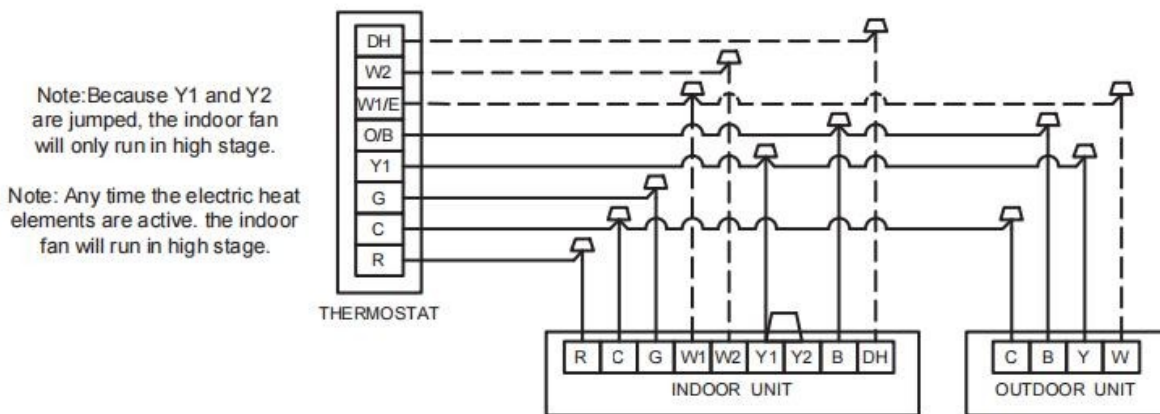

Wiring for 3H and 2C thermostat (heat pump system model)

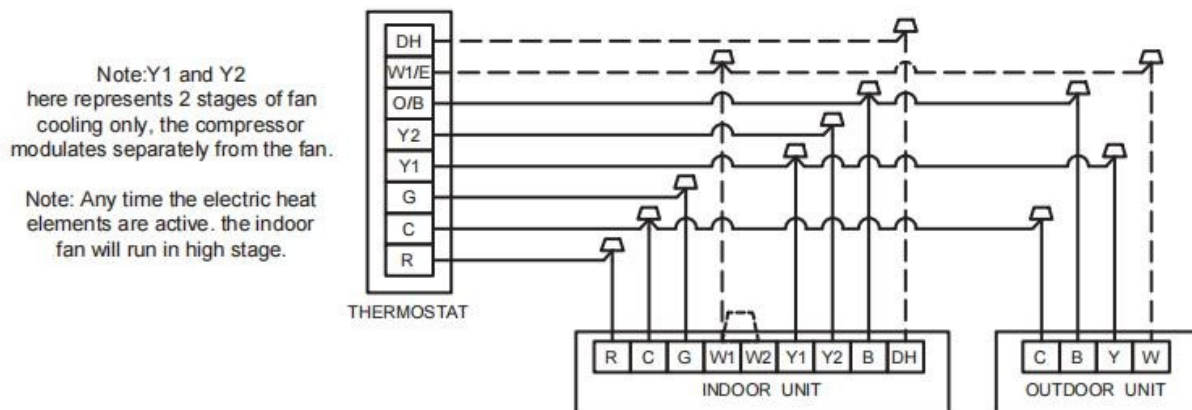

Wiring for 4H and 2C thermostat (heat pump system model)

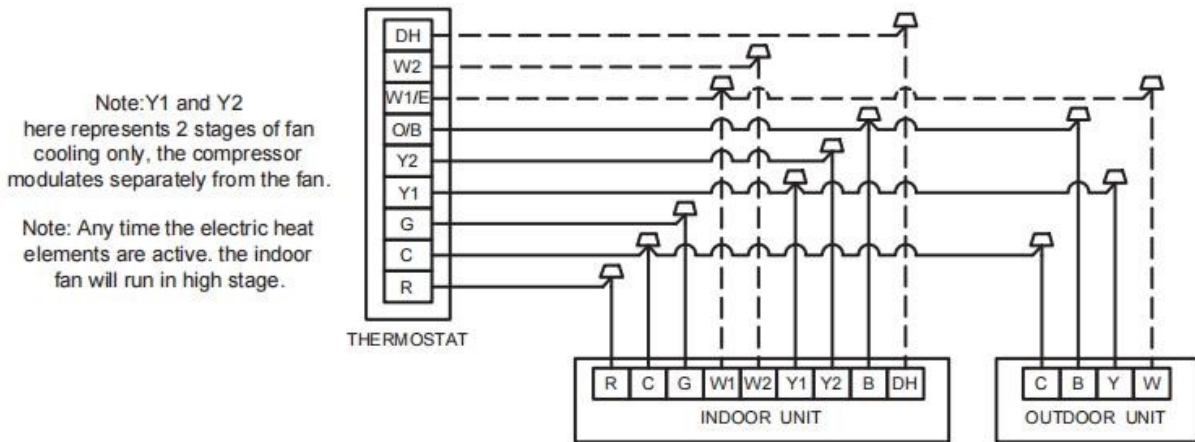

Control Logic:

Indoout unit connector

Connector	Purpose
R	24V Power Connection
C	Common
G	Fan Control
Y1	Low Cooling
Y2	High Cooling
B	Heating Reversing Valve
W1	Stage1 Electrical Heating
W2	Stage2 Electrical Heating
DH	Dehumidification

Outdoout unit connector

Connector	Purpose
C	Common
Y	Cooling
B	Heating Reversing Valve
W	Defrost Control

Note:

- 1) DH wiring is optional and requires a thermostat with a humidistat. DH functions as Passive Dehumidification and will downstage the indoor fan to first stage. System will operate according to normal sequence of operations if DH wiring is absent.
- 2) Dashed lines in the above thermostat wiring diagrams refer to optional wiring (wiring for Passive Dehumidification Function and/OR Electric Heat). For thermostat wiring please refer to the Owner's Manual of the thermostat.
- 3) B wire must be used with heat pump system only, the reversing valve energizes in heating.

4 Electrical parameters

Capacity(Btu/h)		18K	24K	30K	36K	48K	60K
Power (indoor)	Phase	1	1	1	1	1	1
	Frequency and Volt	208/230, 60Hz					
Power (outdoor)	Phase	1	1	1	1	1	1
	Frequency and Volt	208/230, 60Hz					
Max.Fuse	Indoor unit(A)	3	3	3	3	6	10
	Outdoor unit(A)						
Indoor unit Powerline	Line quantity	3	3	3	3	3	3
	Line diameter(AWG)	16/1.5mm ²	16/1.5mm ²	16/1.5mm ²	16/1.5mm ²	16/1.5mm ²	16/1.5mm ²
Outdoor unit Powerline	Line quantity	3	3	3	3	3	3
	Line diameter(AWG)						
Outdoor unit Signal line	Line quantity	3	3	3	3	3	3
	Line diameter(AWG)	20/0.5mm ²	20/0.5mm ²	20/0.5mm ²	20/0.5mm ²	20/0.5mm ²	20/0.5mm ²
Thermostat Signal line	Line quantity	/	/	/	/	/	/
	Line diameter(AWG)	18/1.0mm ²	18/1.0mm ²	18/1.0mm ²	18/1.0mm ²	18/1.0mm ²	18/1.0mm ²


Part 3

Diagnosis and Troubleshooting

1 Error code table	17
2 Troubleshooting	18
2.1 Safety Precautions	18
2.2 T1/T2 temperature sensor fault troubleshooting	21
2.3 Refrigerant concentration sensor fault troubleshooting	22
2.4 Refrigerant leakage protection troubleshooting	23
2.5 Anti-freeze protection troubleshooting	24
2.6 Indoor unit EEPROM fault troubleshooting	25
2.7 Indoor fan motor fault troubleshooting	26
2.8 Communication error between outdoor and indoor unit troubleshooting	27
2.9 Wired controller communication error troubleshooting	28
3. Temperature Sensor Resistance Characteristics	29

1 Error code table

Error code	Error definition
Flash for 2 times every 8 seconds	T1 temperature sensor fault
Flash for 3 times every 8 seconds	T2 temperature sensor fault
Flash for 4 times every 8 seconds	R32 refrigerant concentration sensor fault
Flash for 5 times every 8 seconds	R32 refrigerant leakage protection
Flash for 6 times every 8 seconds	Anti-freeze protection
Flash for 7 times every 8 seconds	Indoor unit EEPROM fault
Flash for 8 times every 8 seconds	Indoor fan motor fault
Flash for 9 times every 8 seconds	Communication error between outdoor and indoor unit
Flash for 10 times every 8 seconds	Wired controller communication error

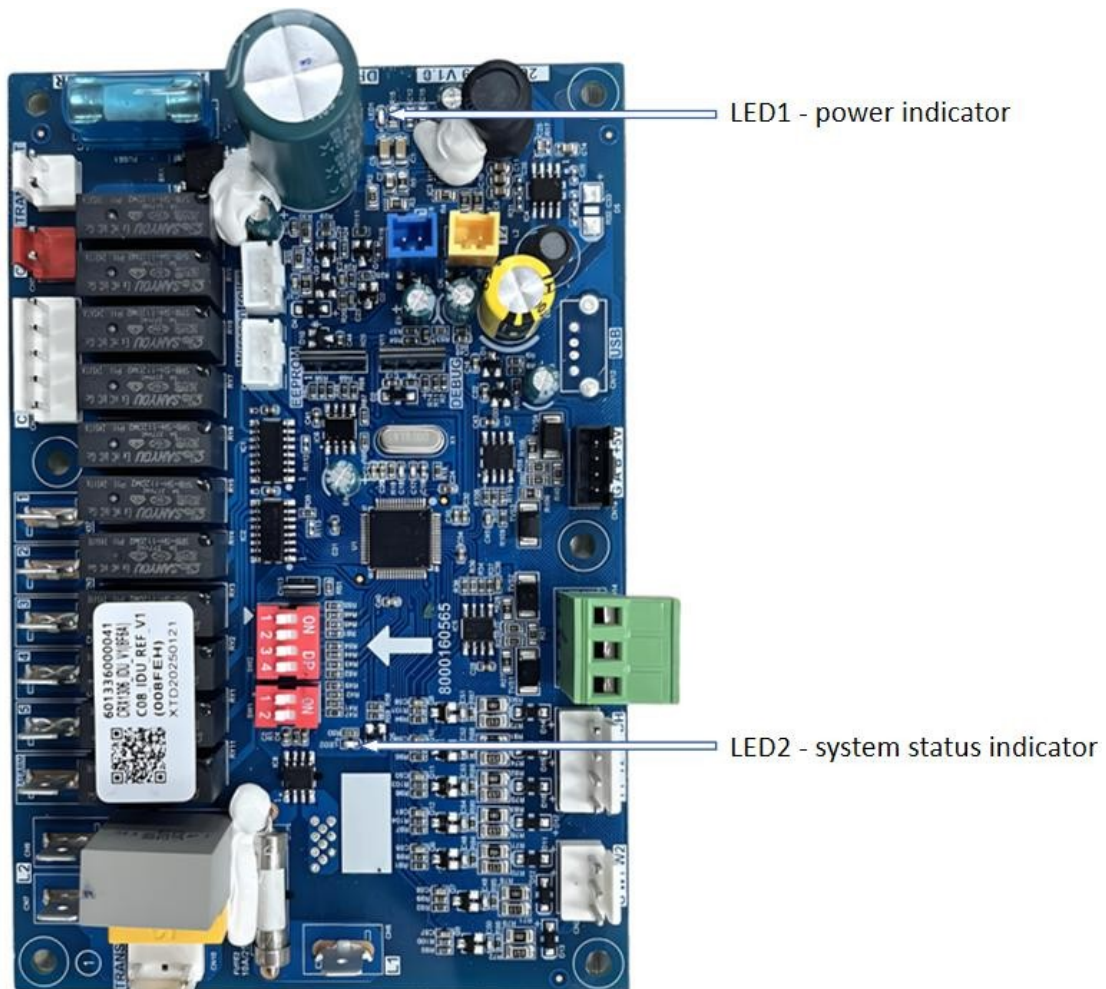

Note: In normal operation, LED1 and LED2 are steady on; when the system is standby, LED1 will be steady on, LED2 will flash slowly.

2 Troubleshooting

2.1 Safety Precautions

The following precautions here are quite important, so be sure to follow them carefully. Read these instructions carefully before installation. Keep this manual in a handy for future preference.

Failure to adhere to all precautionary measures listed in this section may result in personal injury, damage to the unit or to property, or in extreme cases, death.



WARNING

- Indicates a potentially hazardous situation which if not avoided, could result in death or serious injury.



CAUTION

- Indicates a potentially hazardous situation which if not avoided, may result in minor or moderate injury.
- It is also used to alert against unsafe practices.

2.1.1 In case of Accidents or Emergency



WARNING

- If a gas leak is suspected, immediately turn off the gas and ventilate the area if a gas leak is suspected before turning the unit on.
- If strange sounds or smoke is detected from the unit, turn the breaker off and disconnect the power supply cable.
- If the unit comes into contact with liquid, contact an authorized service center.
- If liquid from the batteries makes contact with skin or clothing, immediately rinse or wash the area well with clean water.
- Do not insert hands or other objects into the air inlet or outlet while the unit is plugged in.
- Do not operate the unit with wet hands.
- Do not use a remote controller that has previously been exposed to battery damage or battery leakage.



CAUTION

- Clean and ventilate the unit at regular intervals when operating it near a stove or near similar devices.
- Do not use the unit during severe weather conditions. If possible, remove the product from the window before such occurrences.

2.1.2 Information servicing(For flammable materials)



WARNING

- Use this unit only on a dedicated circuit.
 - Damage to the installation area could cause the unit
 - to fall, potentially resulting in personal injury, property damage, or product failure.
 - Only qualified personnel should disassemble, install, remove, or repair the unit.
 - Only a qualified electrician should perform electrical work. For more information, contact your dealer, seller, or an authorized service center.
-



CAUTION

- While unpacking be careful of sharp edges around the unit as well as the edges of the fins on the condenser and evaporator.

2.1.3 Operation and Maintenance



WARNING

- Do not use defective or under-rated circuit breakers.
- Ensure the unit is properly grounded and that a dedicated circuit and breaker are installed.
- Do not modify or extend the power cable. Ensure the power cable is secure and not damaged during operation.
- Do not unplug the power supply plug during operation.
- Do not store or use flammable materials near the unit.
- Do not open the inlet grill of the unit during operation.
- Do not touch the electrostatic filter if the unit is equipped with one.
- Do not block the inlet or outlet of air flow to the unit.
- Do not use harsh detergents, solvents, or similar items to clean the unit. Use a soft cloth for cleaning.
- Do not touch the metal parts of the unit when removing the air filter as they are very sharp.
- Do not step on or place anything on the unit or outdoor units.
- Do not drink water drained from the unit.

- Avoid direct skin contact with water drained from the unit.
- Use a firm stool or step ladder according to manufacturer procedures when cleaning or maintaining the unit.




CAUTION

- Do not install or operate the unit for an extended period of time in areas of high humidity or in an environment directly exposing it to sea wind or salt spray.
- Do not install the unit on a defective or damaged installation stand, or in an unsecured location.
- Ensure the unit is installed at a level position
- Do not install the unit where noise or air discharge
- Created by the outdoor unit will negatively impact the environment or nearby residences.
- Do not expose skin directly to the air discharged by the unit for prolonged periods of time.
- Ensure the unit operates in areas waterOr other liquids.
- Ensure the drain hose is installed correctly to ensure proper water drainage.
- When lifting or transporting the unit, it is recommended that two or more people are used for this task.
- When the unit is not to be used for an extended time, disconnect the power supply or turn off the breaker.

2.2 T1/T2 temperature sensor fault troubleshooting


- LER2 flashes for 2 times every 8 seconds indicates indoor unit T1 temperature sensor fault
- LED2 flashes for 3 times every 8 seconds indicates indoor unit T2 temperature sensor fault
- The unit stops running and LED2 flashes 2 or 3 times in each round.

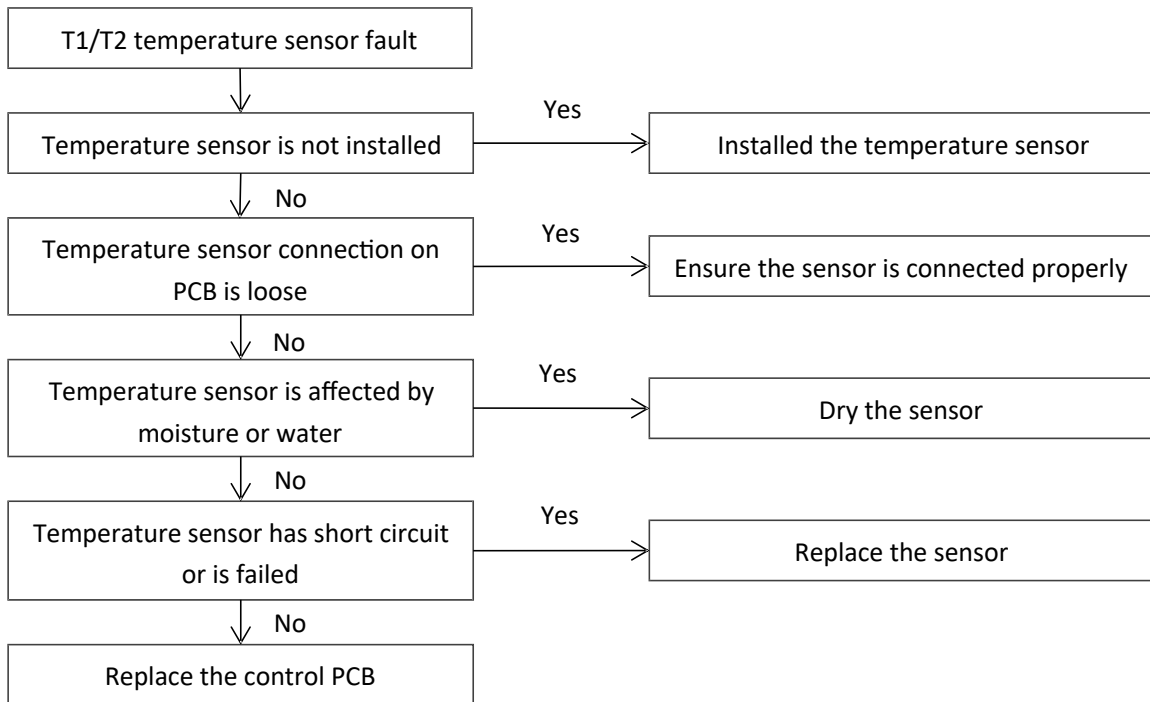

Note: Measure sensor resistance. If the resistance is too low, the sensor has short-circuited. If the resistance is not consistent with the sensor's resistance characteristics table, the sensor has failed.


2.3 Refrigerant concentration sensor fault troubleshooting

- LED2 flash for 4 times every 8 seconds indicates refrigerant concentration sensor fault (Only valid when connected to a refrigerant concentration sensor.)
- The unit stops running and LED2 flashes 4 times in each round.

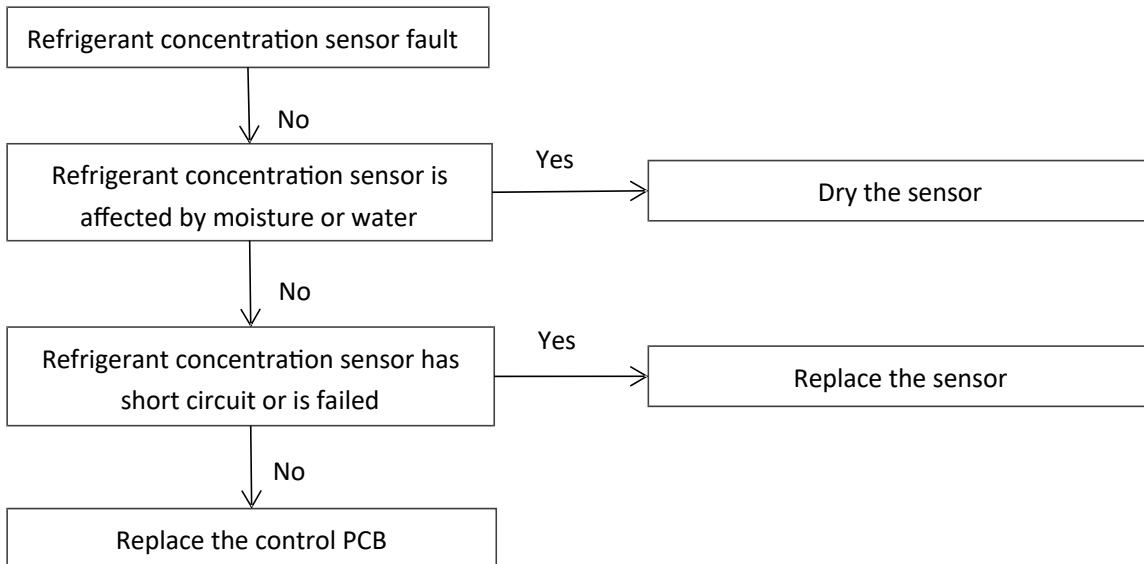

2.4 Refrigerant leakage protection troubleshooting

- LED2 flashes for 5 times every 8 seconds indicates refrigerant leakage protection (Only valid when connected to a refrigerant concentration sensor.)
- The unit stops running and error code is displayed on LED2 flashes 5 times in each round.

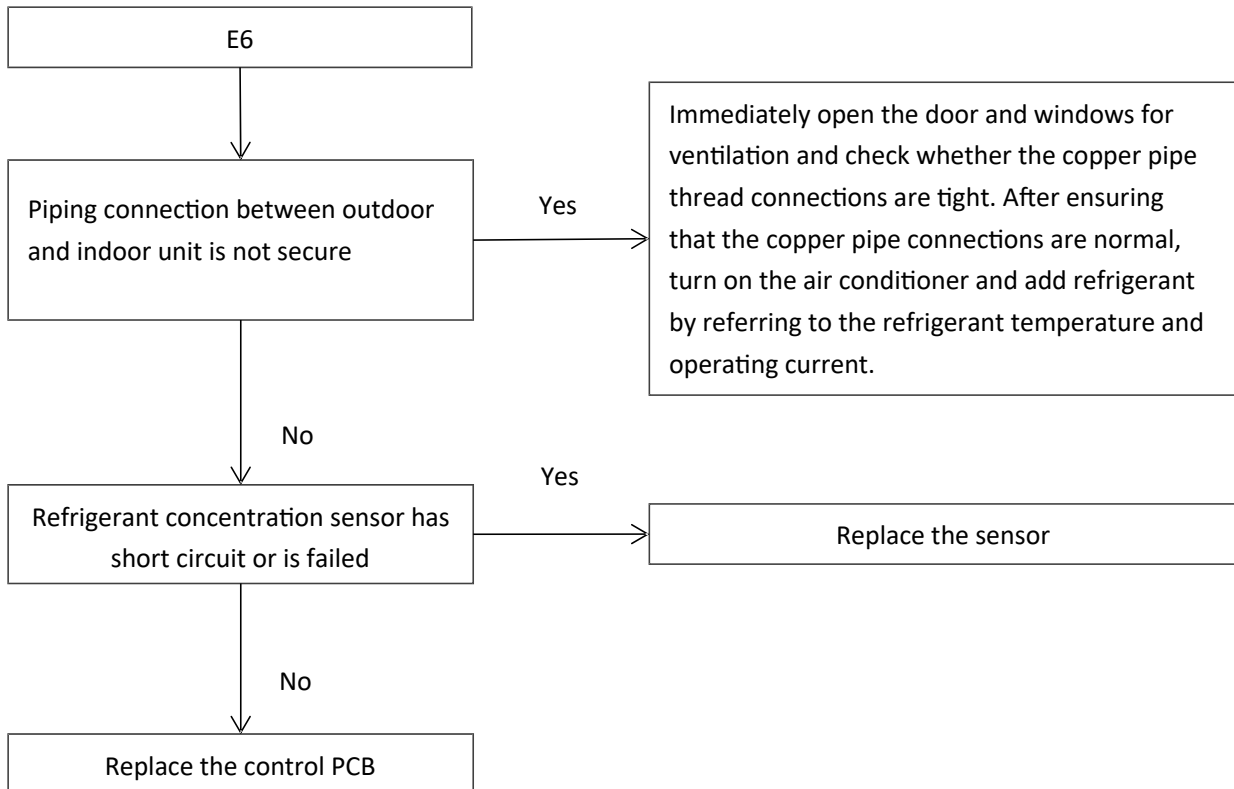


Note:

- 1) Measure sensor resistance. If the resistance is too low, the sensor has short-circuited. If the resistance is not consistent with the sensor's resistance characteristics table, the sensor has failed.
- 2) E2/E3 is applicable only when communication is established between the ComfortStar outdoor unit and the ComfortStar indoor unit via RS-485.


2.5 Anti-freeze protection troubleshooting

- LED2 flashes 6 times every 8 seconds indicates anti-freeze protection.
- The unit stops running and LED2 flashes 6 times in each round.

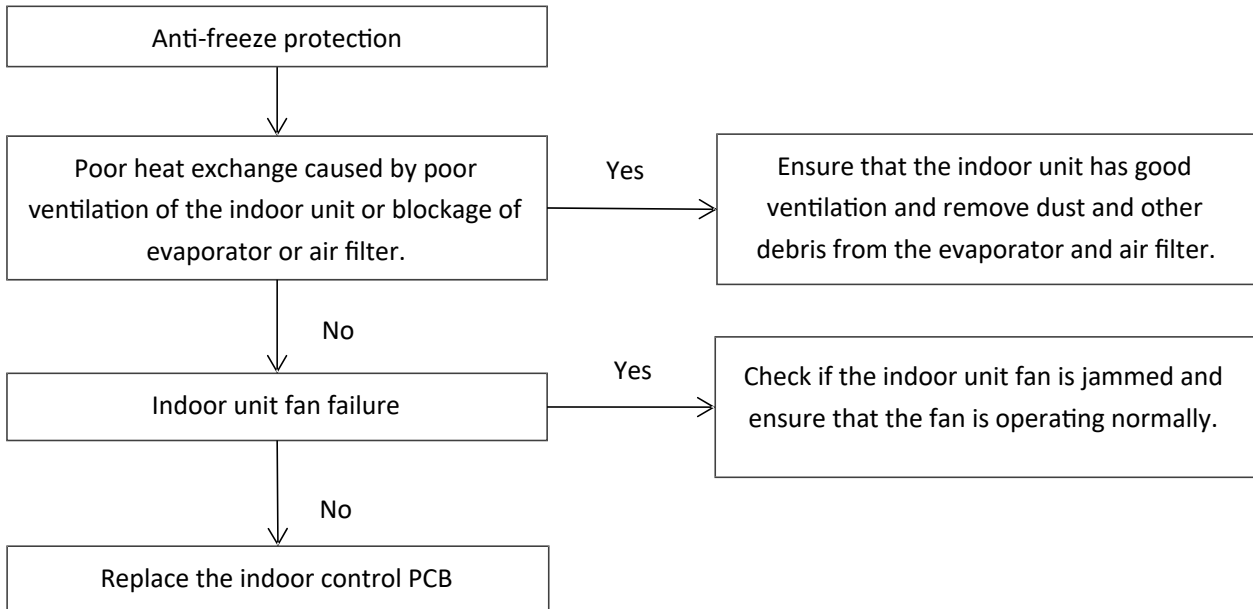


2.6 Indoor unit EEPROM fault troubleshooting

- LED2 flashes for 7 times every 8 seconds indicates Indoor unit EEPROM fault.
- The unit stops running and LED2 flashes 7 times in each round.

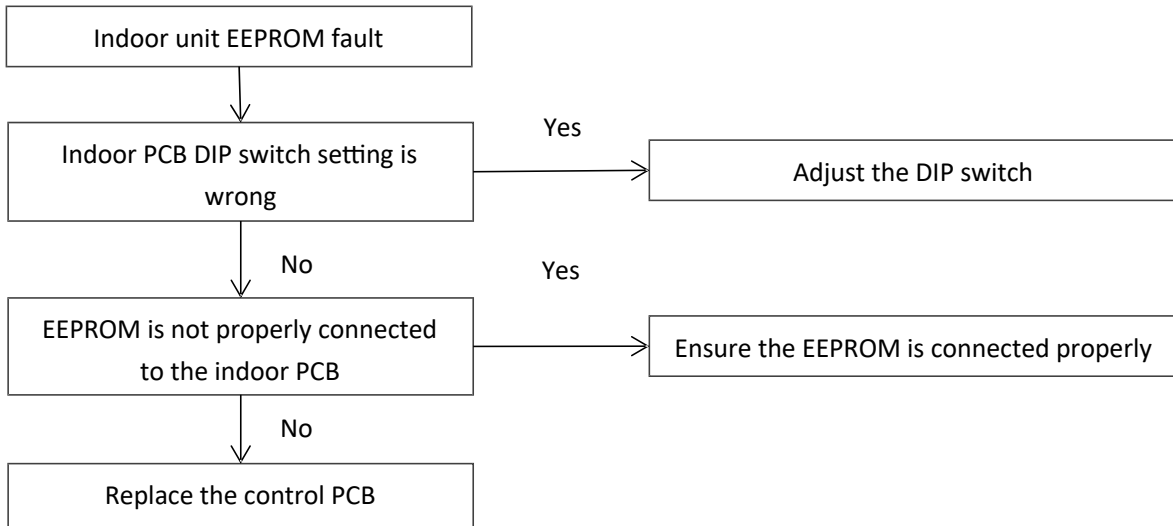


2.7 Indoor fan motor fault troubleshooting

- LED2 flashes 8 times every 8 seconds indicates indoor fan motor fault.
- The unit stops running and LED2 flashes 8 times in each round.

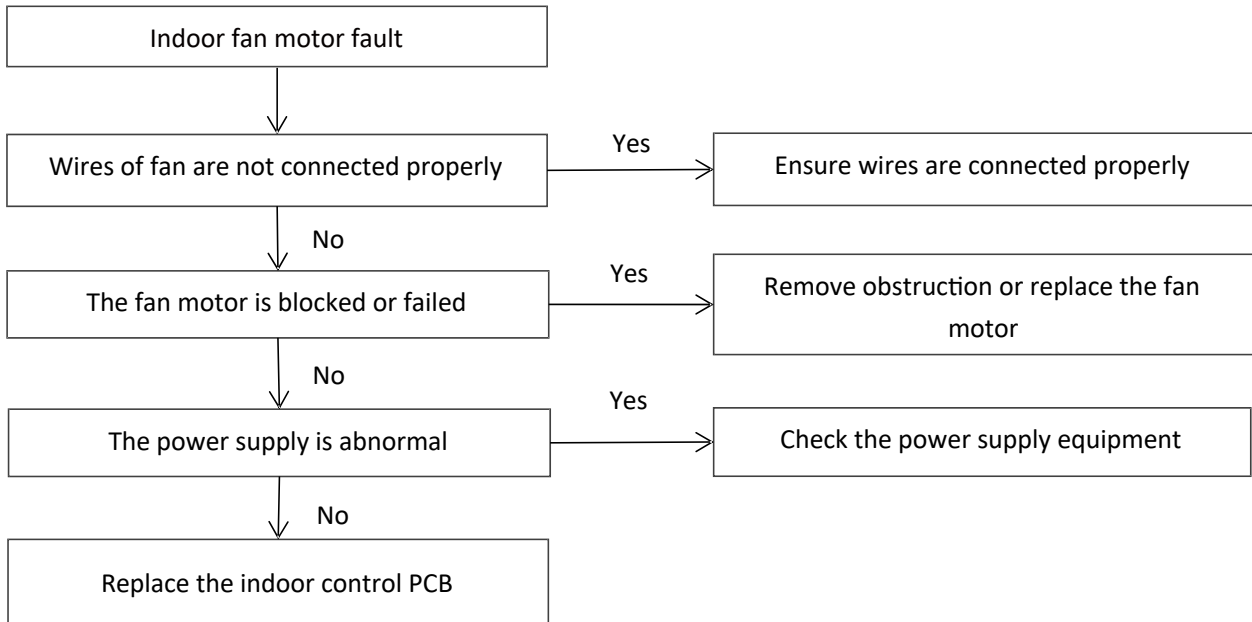


2.8 Communication error between outdoor and indoor unit troubleshooting

- LED2 flashes 9 times every 8 seconds indicates communication error between outdoor and indoor unit.
- The unit stops running and LED2 flashes 9 times in each round.

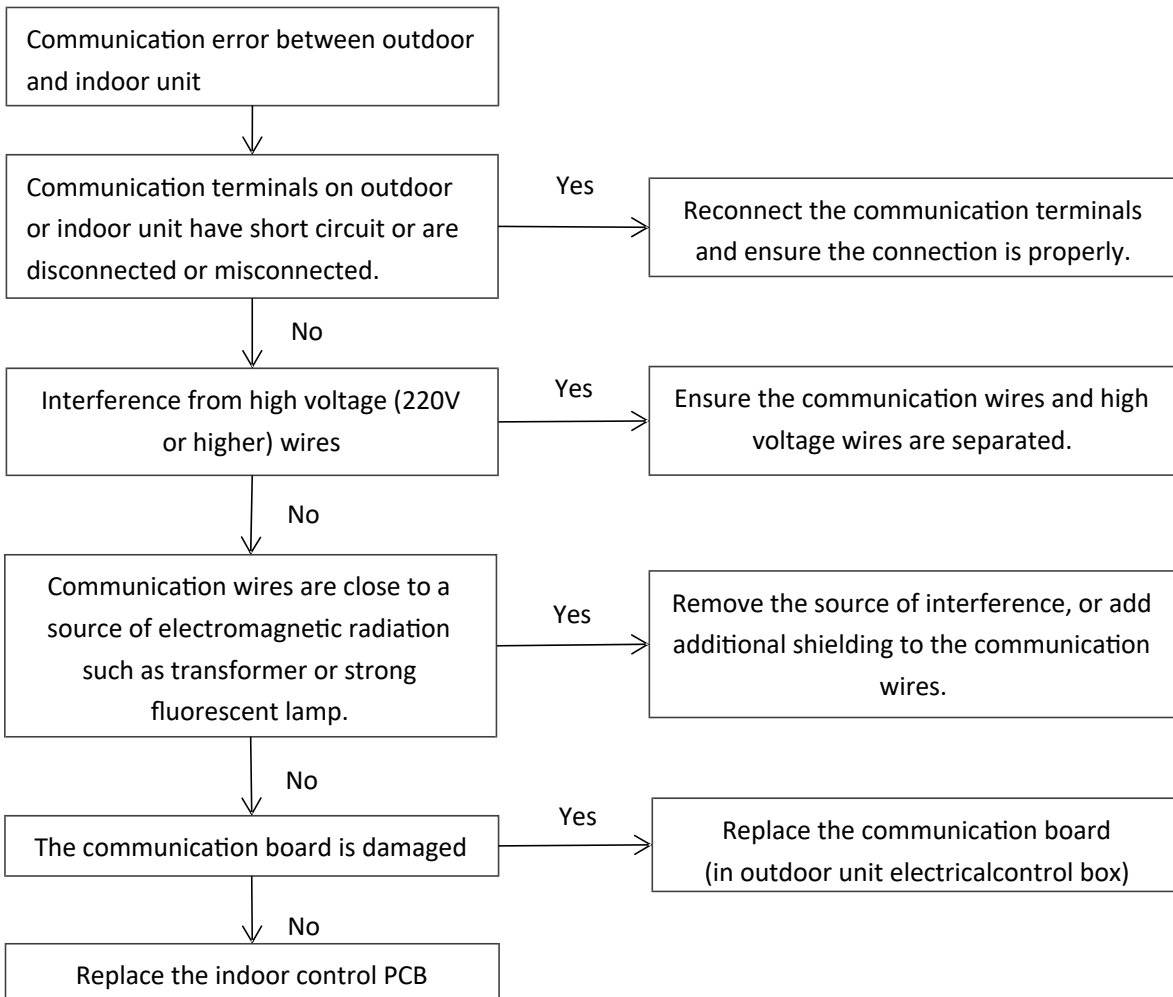

2.9 Wired controller communication error troubleshooting

- LED2 flashes 10 times every 8 seconds indicates wired controller communication error.
- The unit stops running and LED2 flashes 10 times in each round.

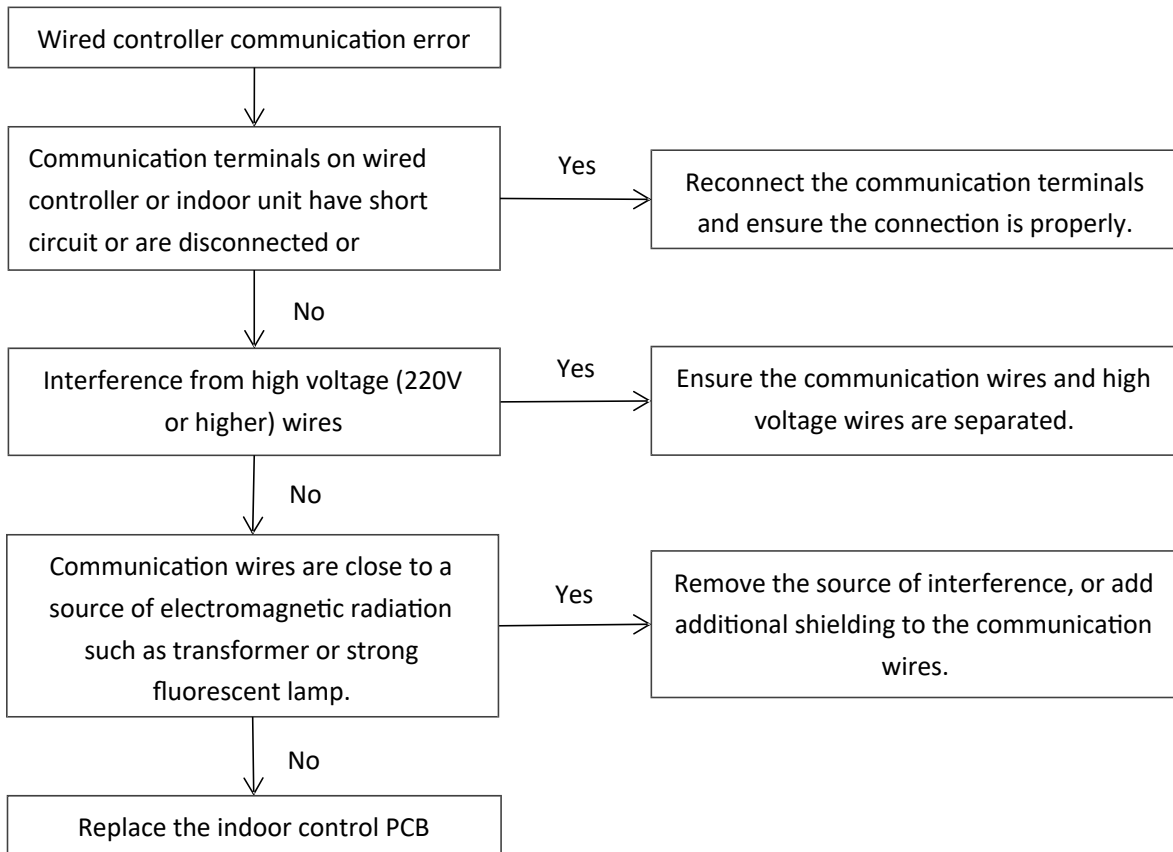

3. Temperature Sensor Resistance Characteristics

Room temperature sensor(T1) and condenser coil temperature sensor(T2) resistance characteristics.


Temperature (°C)	Resistance (kΩ)	Temperature (°C)	Resistance (kΩ)	Temperature (°C)	Resistance (kΩ)	Temperature (°C)	Resistance (kΩ)
-25	144.266	15	16.079	55	2.841	95	0.708
-24	135.601	16	15.313	56	2.734	96	0.686
-23	127.507	17	14.588	57	2.632	97	0.666
-22	119.941	18	13.902	58	2.534	98	0.646
-21	112.867	19	13.251	59	2.44	99	0.627
-20	106.732	20	12.635	60	2.35	100	0.609
-19	100.552	21	12.05	61	2.264	101	0.591
-18	94.769	22	11.496	62	2.181	102	0.574
-17	89.353	23	10.971	63	2.102	103	0.558
-16	84.278	24	10.473	64	2.026	104	0.542
-15	79.521	25	10	65	1.953	105	0.527
-14	75.059	26	9.551	66	1.883		
-13	70.873	27	9.125	67	1.816		
-12	66.943	28	8.721	68	1.752		
-11	63.252	29	8.337	69	1.69		
-10	59.784	30	7.972	70	1.631		
-9	56.524	31	7.625	71	1.574		
-8	53.458	32	7.296	72	1.519		
-7	50.575	33	6.982	73	1.466		
-6	47.862	34	6.684	74	1.416		
-5	45.308	35	6.401	75	1.367		
-4	42.903	36	6.131	76	1.321		
-3	40.638	37	5.874	77	1.276		
-2	38.504	38	5.63	78	1.233		
-1	36.492	39	5.397	79	1.191		
0	34.596	40	5.175	80	1.151		
1	32.807	41	4.964	81	1.113		
2	31.12	42	4.763	82	1.076		
3	29.528	43	4.571	83	1.041		
4	28.026	44	4.387	84	1.007		
5	26.608	45	4.213	85	0.974		
6	25.268	46	4.046	86	0.942		
7	24.003	47	3.887	87	0.912		
8	22.808	48	3.735	88	0.883		
9	21.678	49	3.59	89	0.855		
10	20.61	50	3.451	90	0.828		
11	19.601	51	3.318	91	0.802		
12	18.646	52	3.191	92	0.777		
13	17.743	53	3.069	93	0.753		
14	16.888	54	2.952	94	0.73		



The design and specifications are subject to change without prior notice for product improvement. Consult with the sales agency or manufacturer for details.

DC Inverter Split Outdoor Unit Service Manual

Unit Model: SGT-ZOT4P-18HN4-M-SE15
SGT-ZOT4P-24HN4-M-SE15
SGT-ZOT6P-30HN4-M-SE15
SGT-ZOT6P-36HN4-M-SE15
SGT-ZOT6PA-48HN4-M-SE15
SGT-ZOT6PA-60HN4-M-SE15

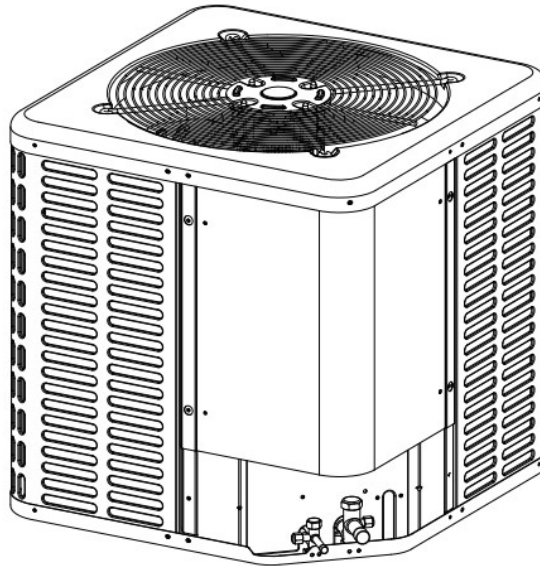

RECOGNIZE THIS SYMBOL AS A SAFETY PRECAUTION

ATTENTION INSTALLING PERSONNEL

Prior to installation, thoroughly familiarize yourself with this Installation Manual. Observe all safety warnings.

During installation or repair, caution is to be observed

It is your responsibility to install the product safely and to educate the customer on its safe use

Content

Part 1 General Information	1
Part 2 Component Layout and Refrigerant Circuit.....	4
Part 3 Wiring Diagram.....	8
Part 4 Diagnosis and Troubleshooting.....	17

Part 1

General Information

1 Product lineup	2
2 Specifications	3

1 Product lineup

Model	Cooling Capacity (Btu/h)	Heating Capacity (Btu/h)	Appearance
SGT-ZOT4P-18HN4-M-SE15	18000	19000	
SGT-ZOT4P-24HN4-M-SE15	23000	26000	
SGT-ZOT6P-30HN4-M-SE15	30000	31000	
SGT-ZOT6P-36HN4-M-SE15	34200	36000	
SGT-ZOT6PA-48HN4-M-SE15	48000	48000	
SGT-ZOT6PA-60HN4-M-SE15	52500	54000	

2 Specifications

OUTDOOR UNIT			SGT-ZOT4P- 18HN4-M-SE15	SGT-ZOT4P- 24HN4-M-SE15	SGT-ZOT6P- 30HN4-M-SE15	SGT-ZOT6P- 36HN4-M-SE15	SGT-ZOT6PA- 48HN4-M-SE15	SGT-ZOT6PA- 60HN4-M-SE15
Power supply	Rated Voltage	V, Ph, Hz	208/230V, 1Ph, 60Hz					
Cooling	capacity	Btu/h	18000	23000	30000	34200	48000	52500
	Input	W	1600	2450	2950	3500	5520	6580
Heating	capacity	Btu/h	19000	26000	31000	36000	48000	54000
	Input	W	1600	2650	2750	3150	4350	4700
Outdoor Minimum Circuit Ampacity		A	16.0	19.0	22.5	24.0	36.0	39.0
Outdoor Max.Fuse		A	20.0	20.0	25.0	30.0	40.0	40.0
Outdoor Air Flow		CFM	2100	2100	2800	2800	3050	3050
Outdoor Noise Level		dB(A)	38.5	42.0	40.0	50.0	53.0	53.0
Connecting Wiring		AWG	485: AWG 25*3 Shielded, 24V: AWG 20					
Communication Type			24V / 485					
Throttle type			Capillary					
Outdoor Unit	Unpacking(W*H*D)	inch	23-5/8×23-5/8×25		29-9/64×29-9/64×25		29-9/64×29-9/64×32-7/8	
	Packing (W*H*D)	inch	25-63/64×25-63/64×26-3/16		30-5/16×30-5/16×26-3/16		30-5/16×30-5/16×34-1/16	
	Net/Gross weight	lbs	111/117	111/117	146/152	146/152	175/183	175/183
Refrigeration	Type/Charge	oz	R32/58.2	R32/58.2	R32/95.24	R32/95.24	R32/119.93	R32/119.93
	Additional Charge	oz/ft	0.52	0.52	0.52	0.52	0.52	0.52
	N.A.Design Pressure	PSI	174/609	174/609	174/609	174/609	174/609	174/609
Refrigerant pipe	Liquid Valve Size	inch	3/8	3/8	3/8	3/8	3/8	3/8
	Vapor Valve Size	inch	3/4	3/4	3/4	3/4	3/4	3/4
	Max. piping length	ft	98	164	164	246	246	246
	Max. height drop	ft	66	82	82	98	98	98
Operation temperature range	Cooling	°F	5~131	5~131	5~131	5~131	5~131	5~131
	Heating	°F	-4~75	-4~75	-4~75	-4~75	-4~75	-4~75


Part 2

Component Layout and Refrigerant Circuit


1 Layout Functional Components	5
2 Piping diagrams	7

1 Layout Functional Components


SGT-ZOT4P-18HN4-M-SE15,SGT-ZOT4P-24HN4-M-SE15

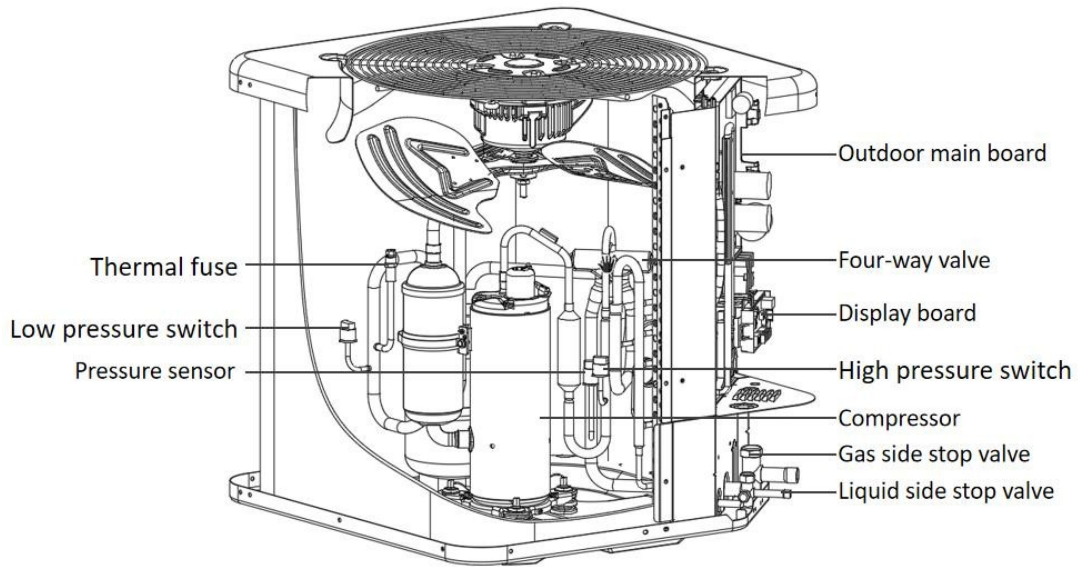


SGT-ZOT6P-30HN4-M-SE15,SGT-ZOT6P-36HN4-M-SE15

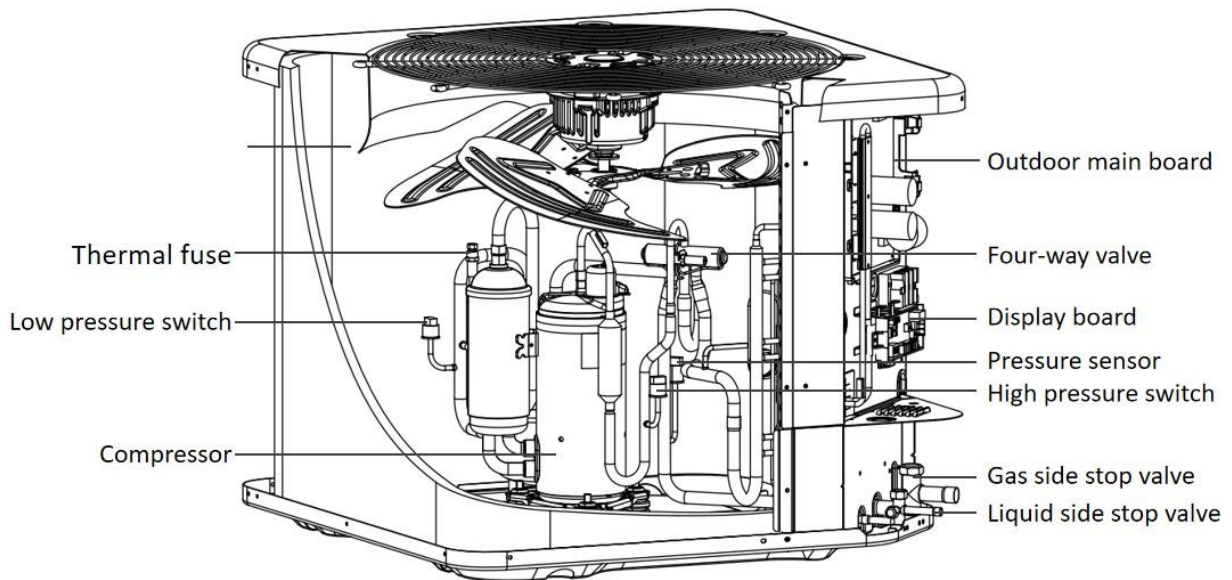

SGT-ZOT6PA-48HN4-M-SE15,SGT-ZOT6PA-60HN4-M-SE15

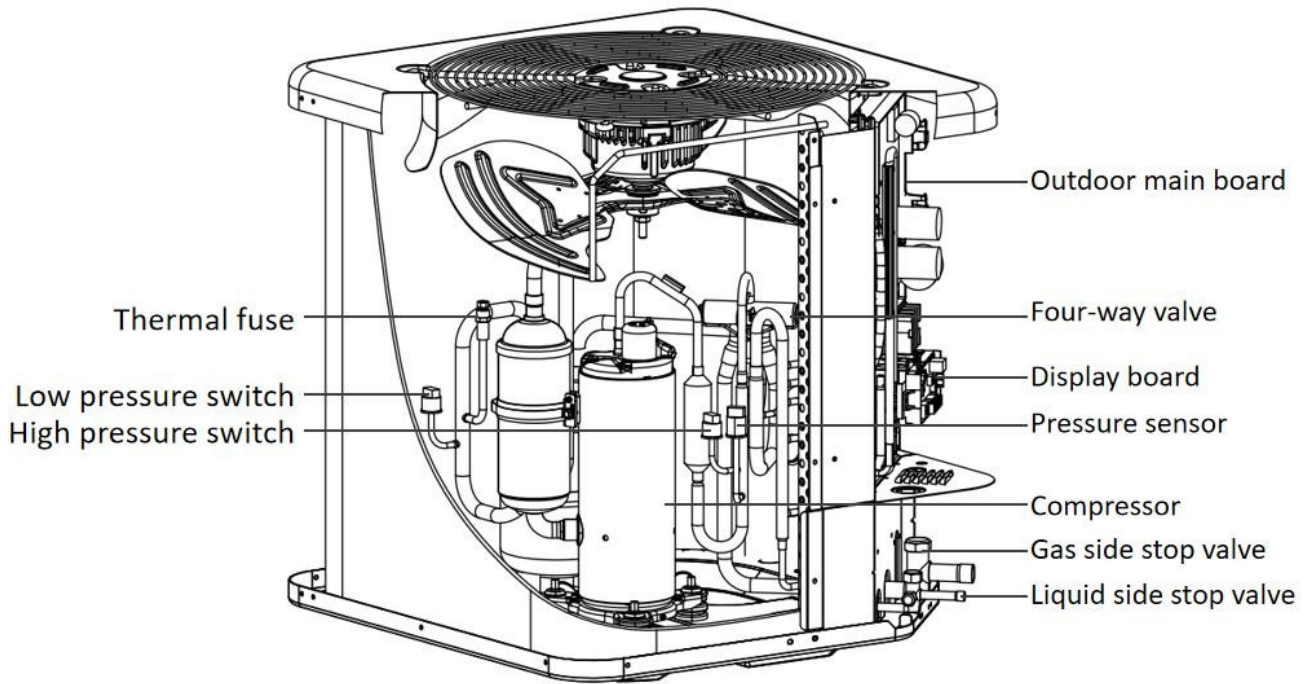

2 Piping diagrams

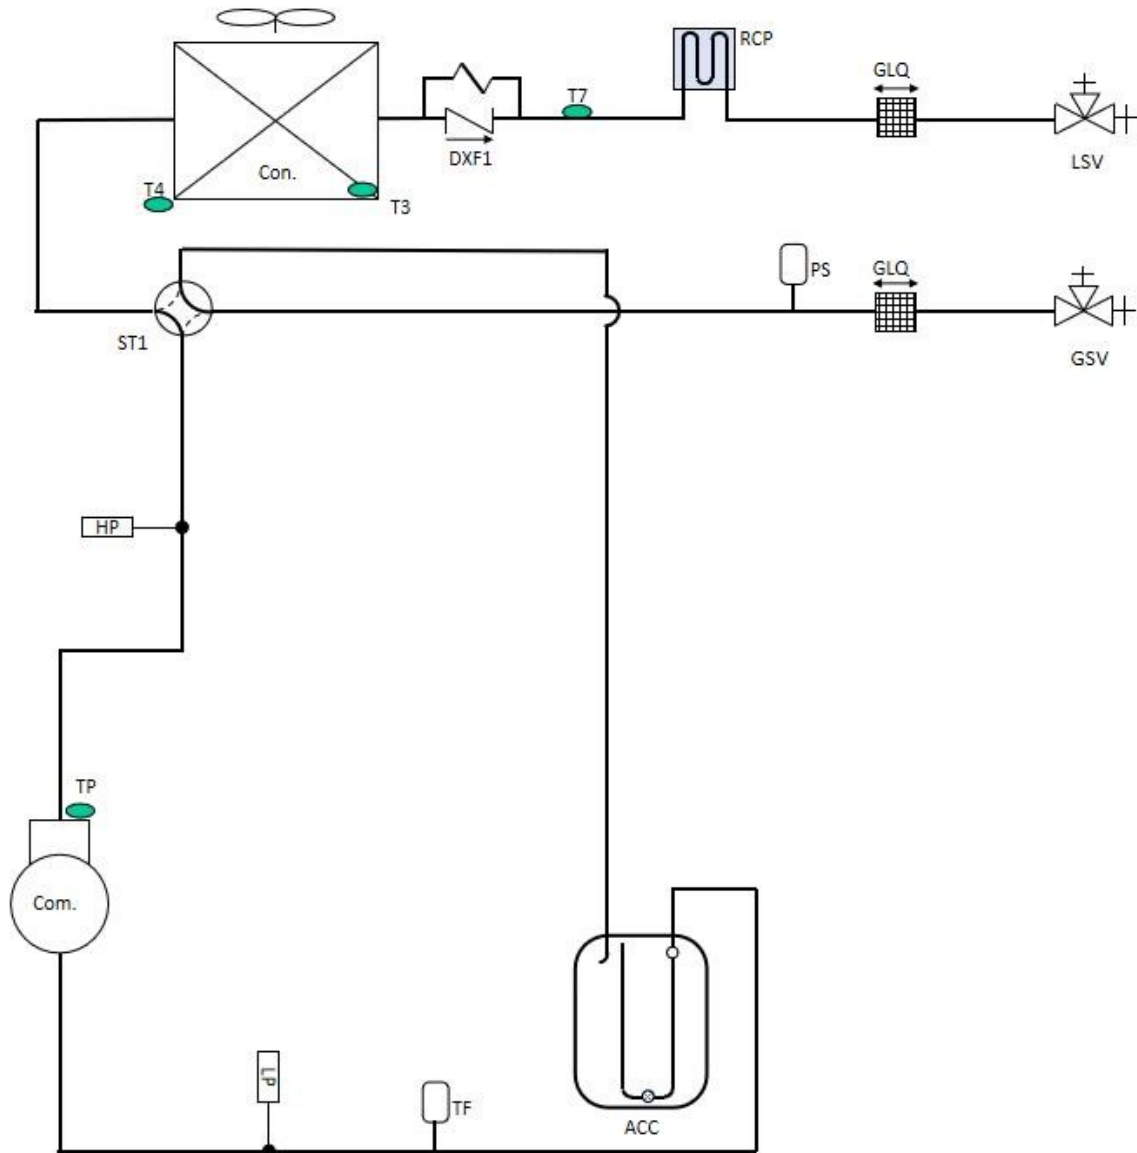


NO.	Component(Outdoor unit)	NO.	Component(Outdoor unit)
Com.	Compressor	RCP	Refrigerant cooling pipe
TP	Exhaust temperature sensor	GLQ	Filter
HP	High pressure switch	LSV	Liquid Stop Valve
ST1	Four-way valve	GSV	Gas Stop Valve
T4	Ambient temperature sensor	PS	Pressure sensor
T3	Condenser coil temperature sensor	ACC	Gas-liquid separator
Con.	Condenser	TP	Thermal fuse
DXF1	One-way valve	LP	Low pressure switch

Part 3


Wiring Diagram

1 Electric wiring diagram	9
2 PCB	10
3 Low voltage wiring diagram	12

1 Electric wiring diagram

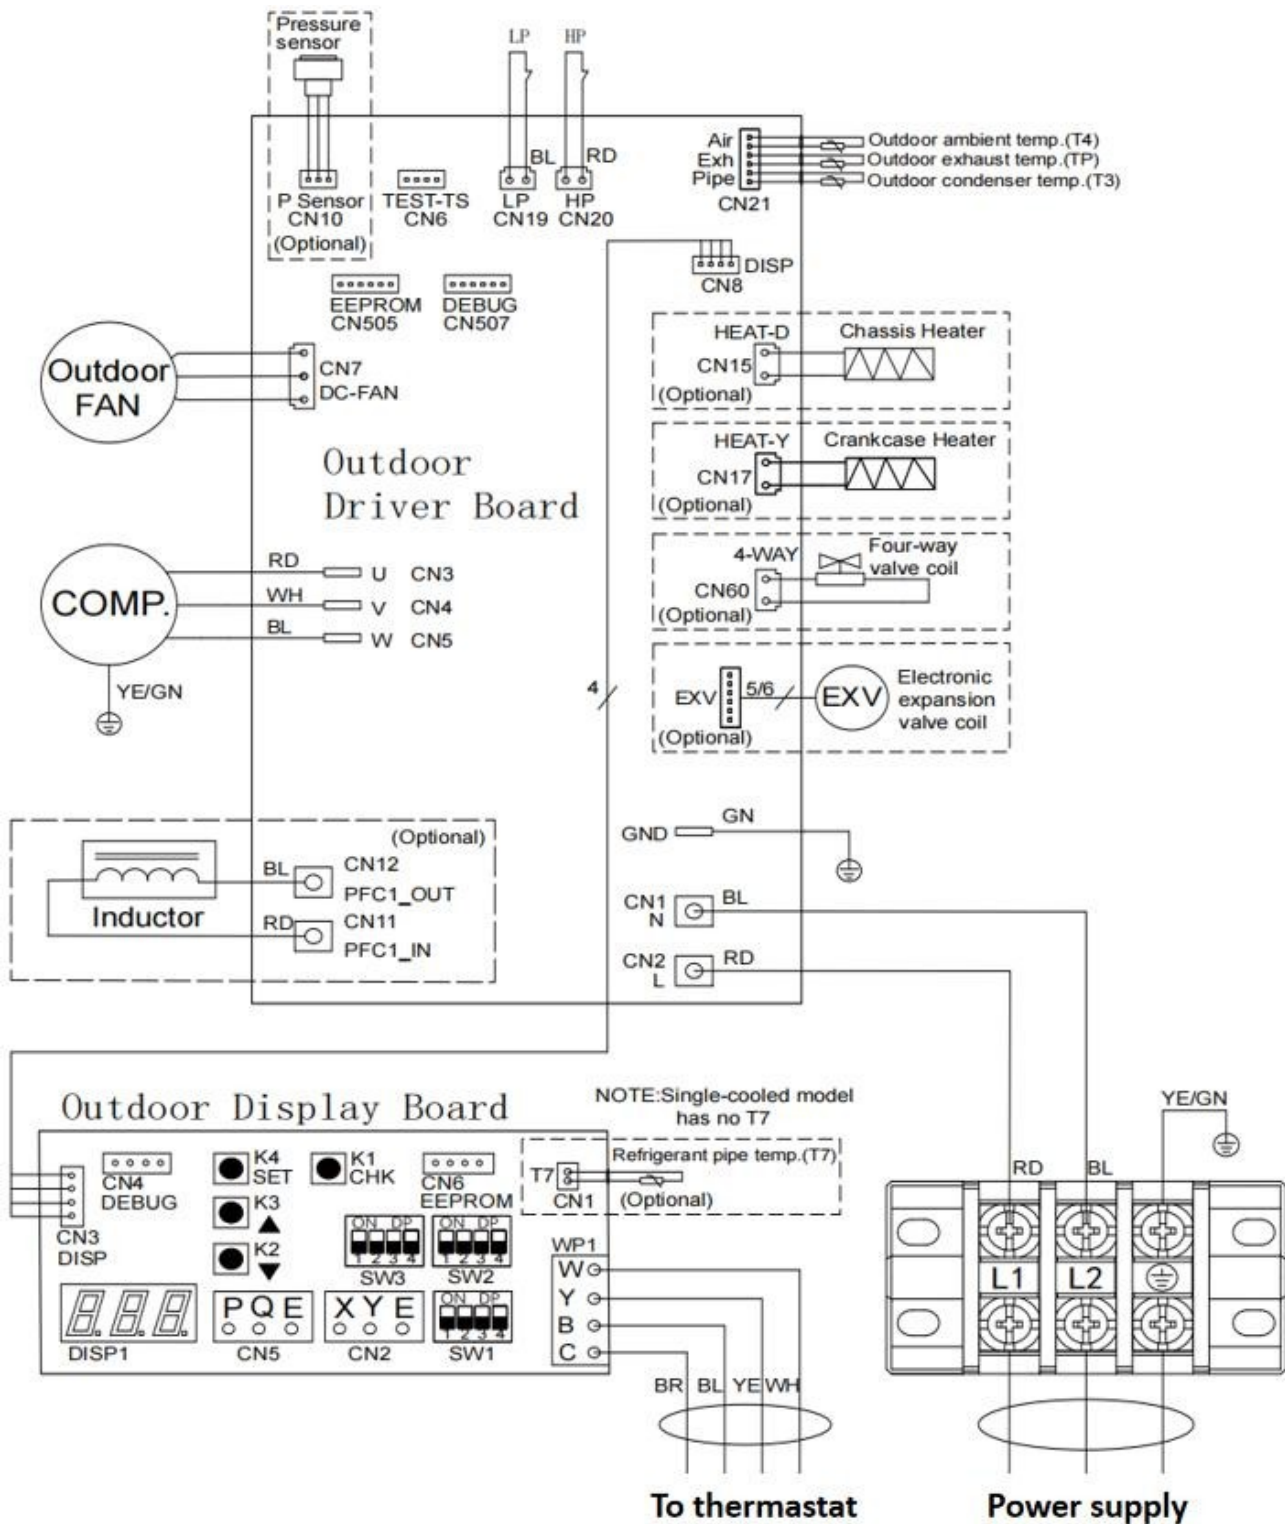


2 PCB

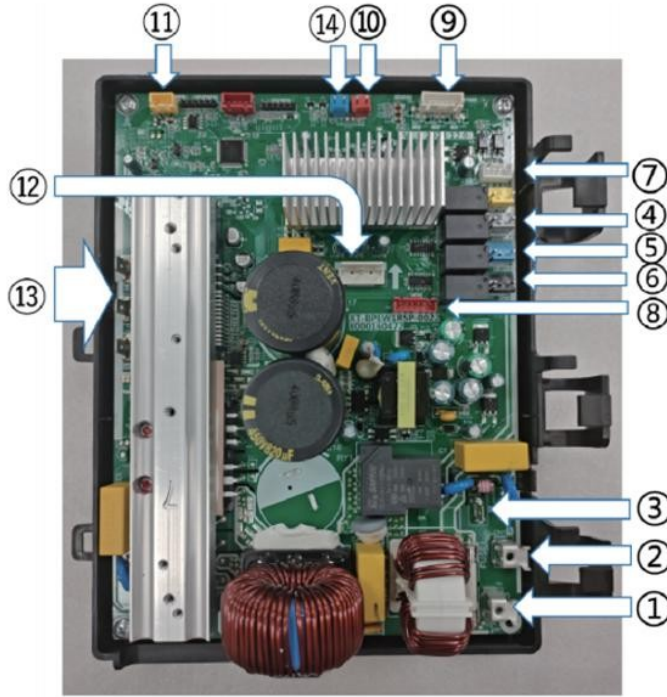


No.	Functional description
1	Power supply input L(L1)
2	Power supply input N(L2)
3	Ground wire
4	Crankshaft heating port
5	Four-way valve port
6	Solenoid Valve port
7	Display board ports
8	Electronic expansion valve port
9	T3 T4 TP sensor port
10	High pressure protection switch port
11	Pressure sensor port
12	DC motor port
13	Compressor port U V W
14	Low pressure protection switch port

18/24/30/36K Outdoor Main Control Board

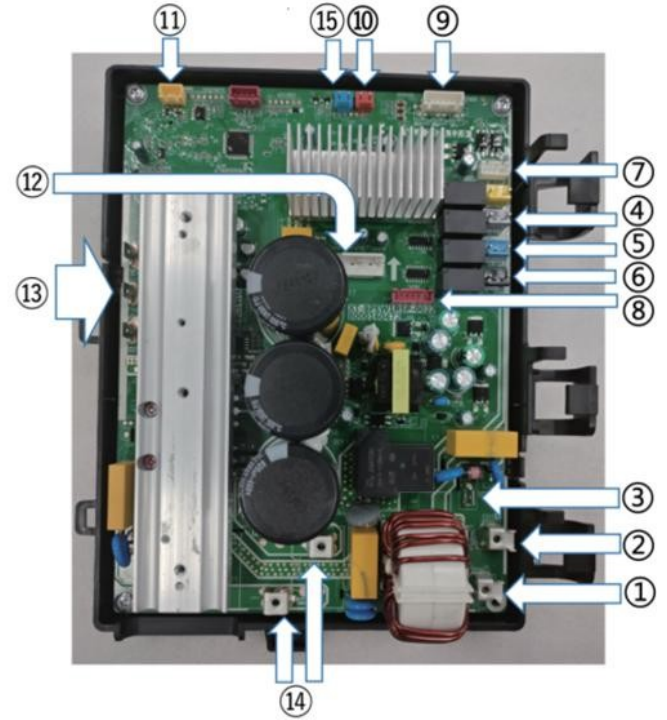

No.	Functional description
1	Power supply input L(L1)
2	Power supply input N(L2)
3	Ground wire
4	Crankshaft heating port
5	Four-way valve port
6	Solenoid Valve port
7	Display board ports
8	Electronic expansion valve port
9	T3 T4 TP sensor port
10	High pressure protection switch port
11	Pressure sensor port
12	DC motor port
13	Compressor port U V W
14	Reactor port
15	Low pressure protection switch port

48/60K Outdoor Main Control Board

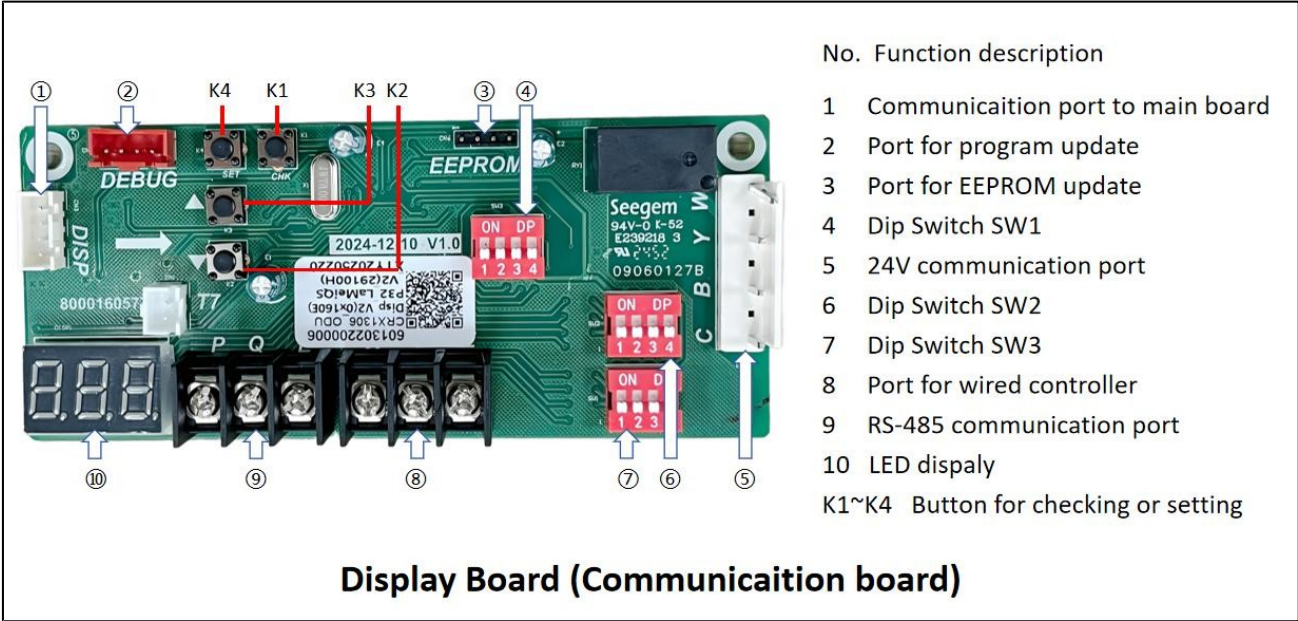

Definition and uses of the button

- K1: Press "K1" once to enter the outdoor unit parameter inspection.
- K2: Press "K2" to view the parameters in sequence.
- K3: Press "K3" to view the parameters in reverse order.
- K4: "SET" button used to enter forced cooling mode to recover the refrigerant.

Definition of SW1~SW3


Wire Color Code	DIP switch status Indicate		Outdoor Display Board SW1 DIP switch selection				Outdoor Display Board SW2 DIP switch selection			
	ON	OFF	SW1.1	SW1.2	SW1.3	SW1.4	SW2.1	SW2.2	SW2.3	SW2.4
RD RED OR ORANGE	<input type="checkbox"/>	This Indicate OFF (The DIP switch is dialed to the digital side)	OFF	24V Control	SW1.1	OFF	Auto Defrosting	SW2.1	OFF	Periodically Defrosting
BL BLUE GN GREEN	<input type="checkbox"/>		ON	RS485 Comm. Mode		ON	°F for Fahrenheit		ON	Defrost interval 60 minutes
BR BROWN GY GRAY	<input type="checkbox"/>	This Indicate ON (The DIP switch is dialed to the non-digital side)	OFF	°C for Celsius	SW1.2	OFF	Defrost interval 30 minutes	SW2.2	ON	Normal Defrosting
BK BLACK YE YELLOW	<input type="checkbox"/>		ON	Heating and cooling		ON	Single-cooled		ON	Accelerate Defrosting
WH WHITE PR PURPLE	<input type="checkbox"/>		OFF	Normal Cooling	SW1.3	OFF	Normal Thermostat	SW2.3	OFF	Normal Thermostat
	<input type="checkbox"/>		ON	Accelerate Cooling		ON	Accelerate Cooling		ON	O/B Thermostat

Outdoor Display Board SW3 DIP switch selection			
SW3.1	SW3.2	SW3.3	Models
OFF	OFF	OFF	18K
OFF	OFF	ON	24K
OFF	ON	OFF	30K
OFF	ON	ON	36K
ON	OFF	OFF	48K
ON	OFF	ON	60K
SW3.4	OFF	Normal Heating	
	ON	Accelerate Heating	


3 Low voltage wiring diagram

The following wiring diagram are suitable for the Indoor Unit and Outdoor Unit with 24V thermostat.


Wiring for 1H and 1C thermostat (no heat pump system model)

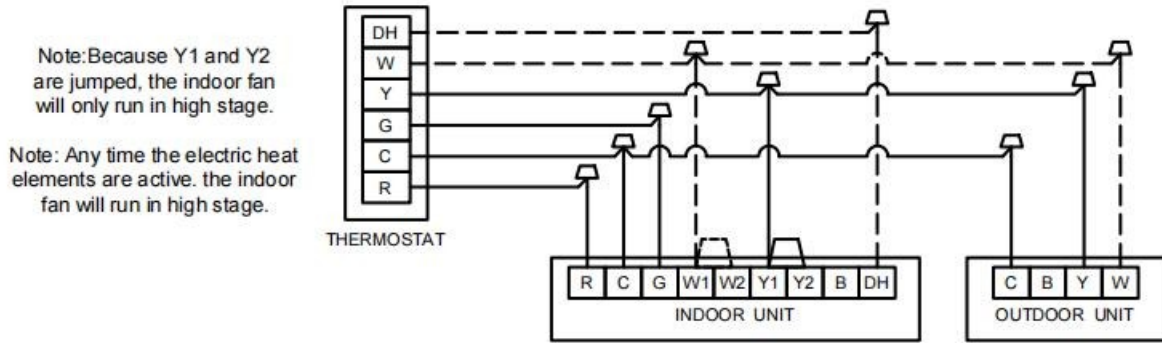


Wiring for 1H and 1C thermostat (no heat pump system model)

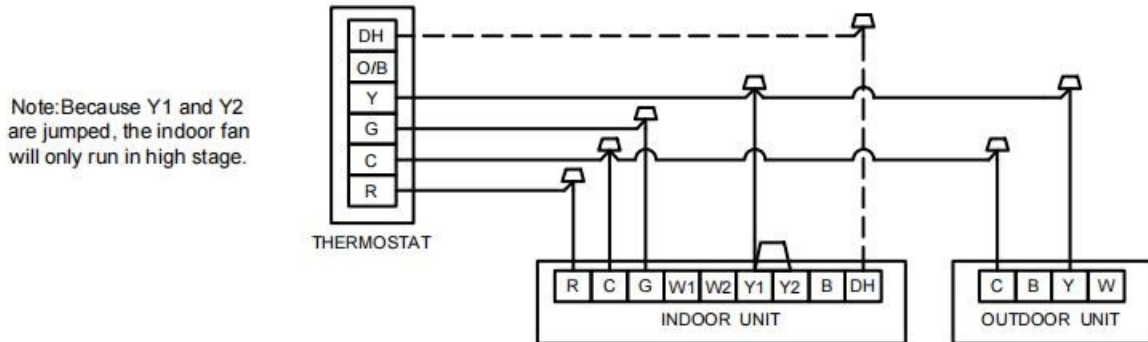


Wiring for 2H and 1C thermostat (no heat pump system model)

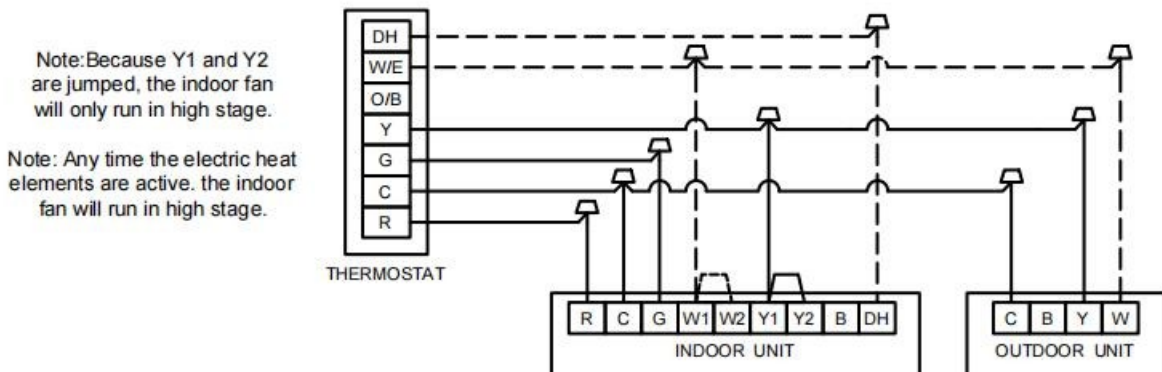


Wiring for 2H and 2C thermostat (no heat pump system model)

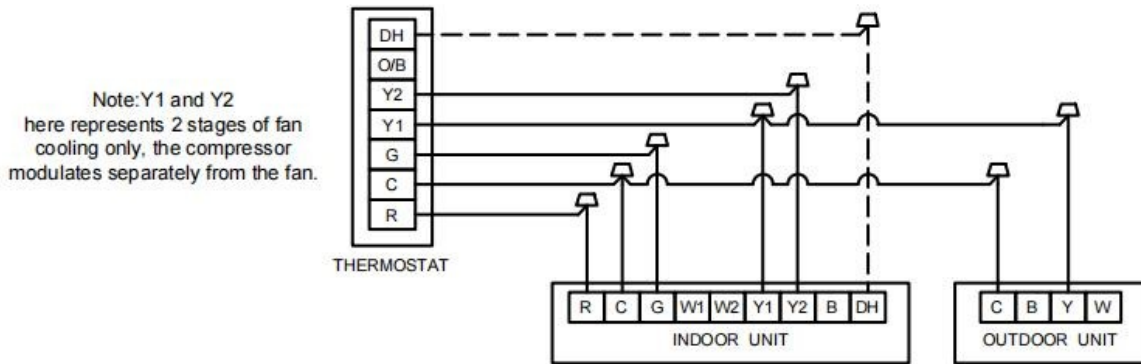


Wiring for 3H and 1C thermostat (no heat pump system model)

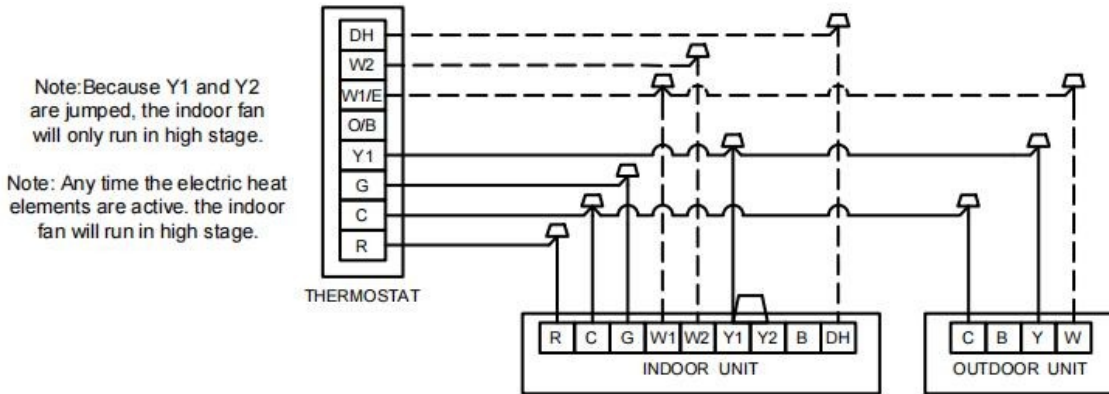

Wiring for 3H and 2C thermostat (no heat pump system model)

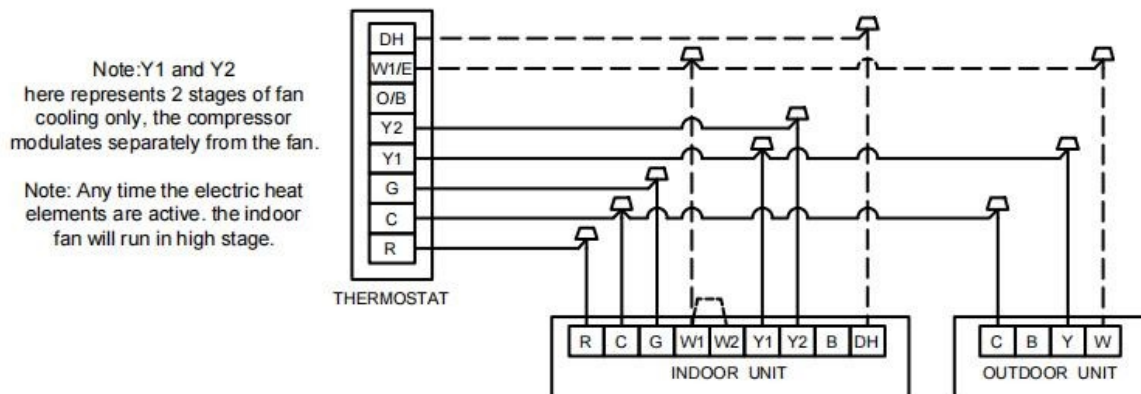


Wiring for 4H and 2C thermostat (no heat pump system model)

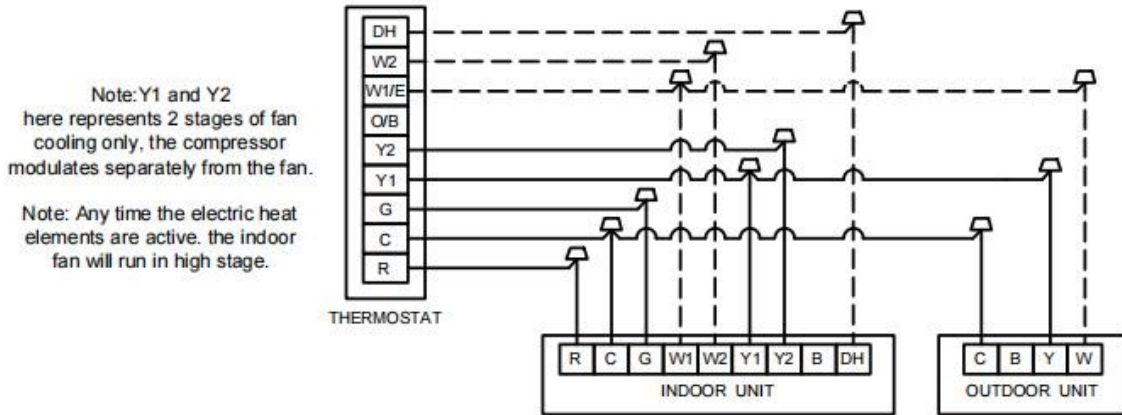


Heat Pump System Model


Wiring for 1H and 1C thermostat (heat pump system model)

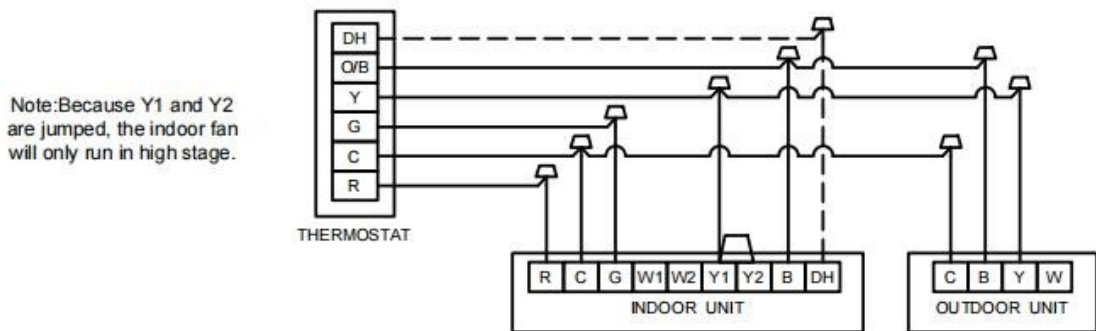


Wiring for 2H and 1C thermostat (heat pump system model)

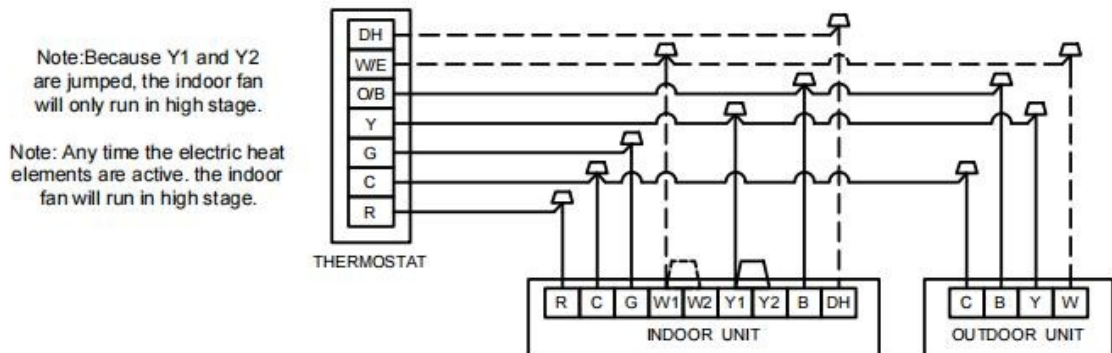


Wiring for 2H and 2C thermostat (heat pump system model)

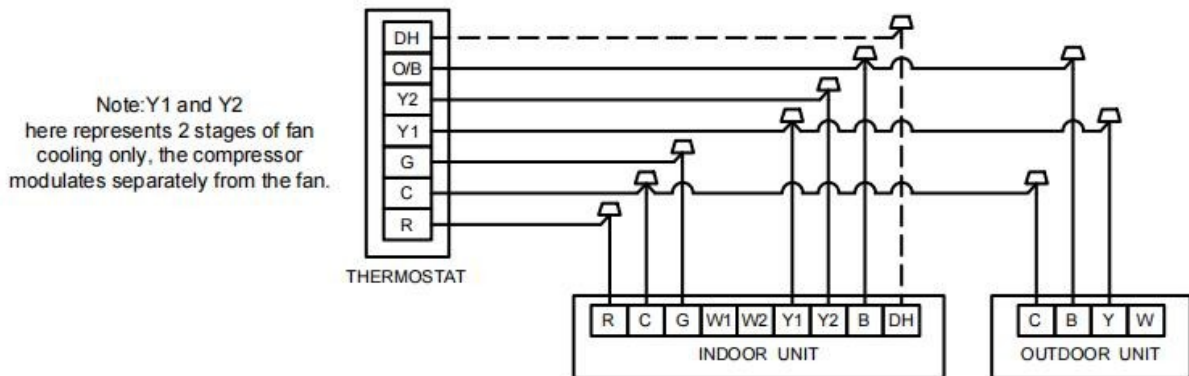


Wiring for 3H and 1C thermostat (heat pump system model)

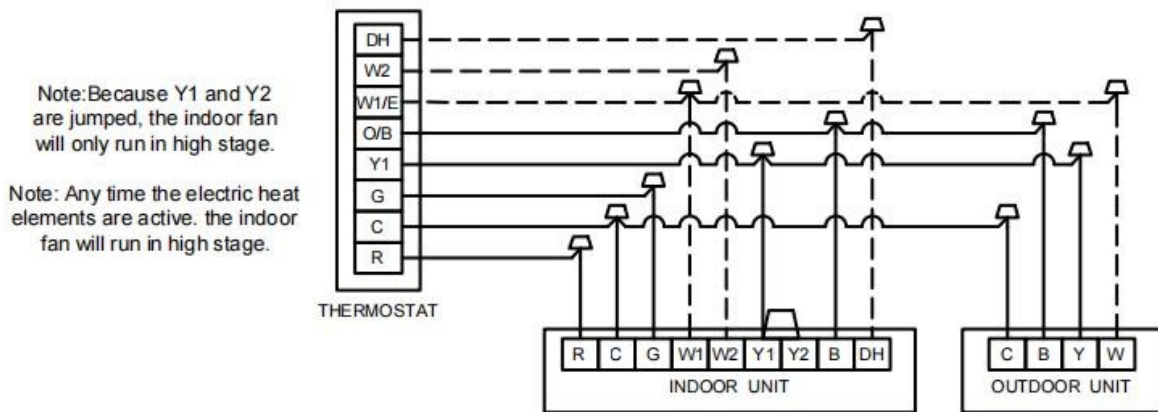

Wiring for 3H and 2C thermostat (heat pump system model)

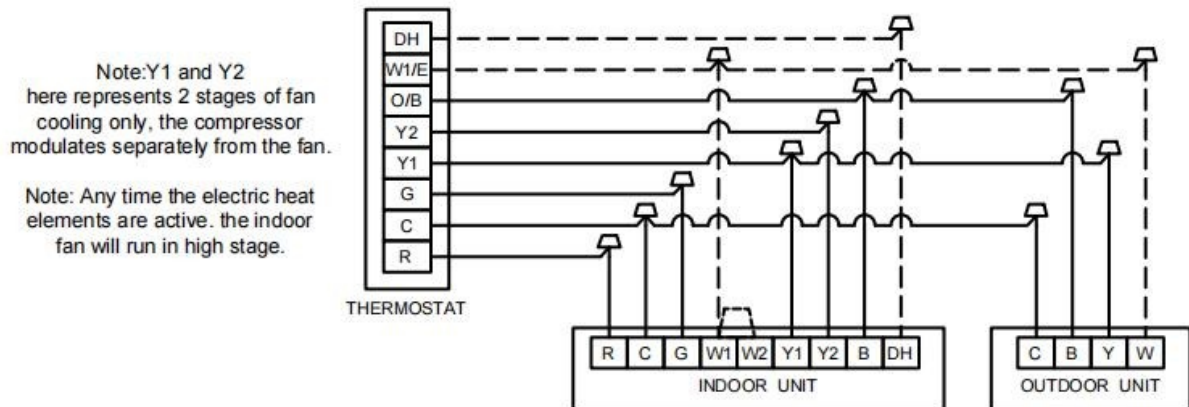

Wiring for 4H and 2C thermostat (heat pump system model)

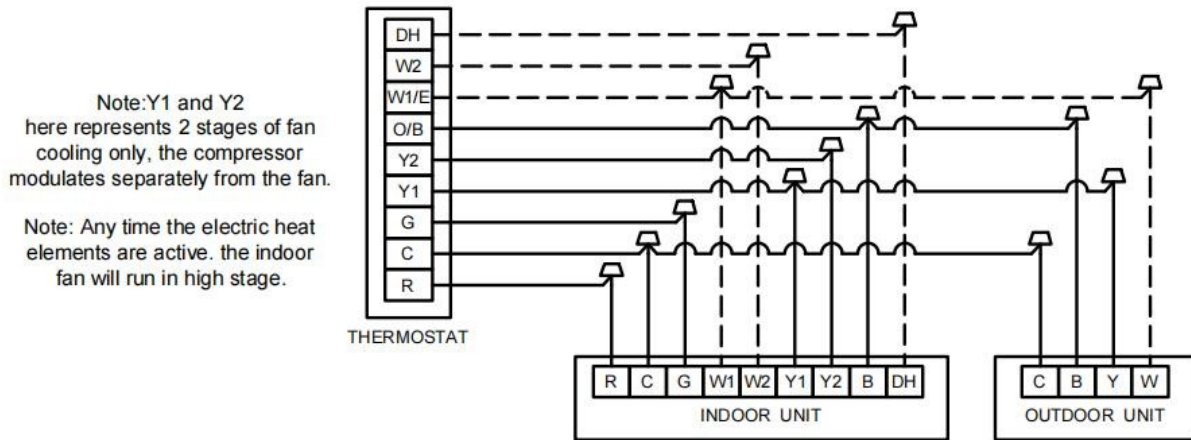

Control Logic:

Indoor unit connector

Connector	Purpose
R	24V Power Connection
C	Common
G	Fan Control
Y1	Low Cooling
Y2	High Cooling
B	Heating Reversing Valve
W1	Stage 1 Electric Heating
W2	Stage 2 Electric Heating
DH	Dehumidification

Outdoor unit connector

Connector	Purpose
C	Common
Y	Cooling
B	Heating Reversing Valve
W	Defrost control

Note:

- 1) DH wiring is optional and requires a thermostat with a humidistat. DH functions as Passive Dehumidification and will downstage the indoor fan to first stage. System will operate according to normal sequence of operations if DH wiring is absent.
- 2) Dashed lines in the above thermostat wiring diagrams refer to optional wiring (wiring for Passive Dehumidification Function and/OR Electric Heat). For thermostat wiring please refer to the Owner's Manual of the thermostat.
- 3) B wire must be used with heat pump system only, the reversing valve energizes in heating.

Part 4

Diagnosis and Troubleshooting

1 Error code table	23
2 Troubleshooting	26
2.1 Safety Precautions	26
2.2 ATL Troubleshooting	29
2.3 E1/F0 Troubleshooting	30
2.4 E2/E3/F4/F5/F6/F7/FC/FE/H8 Troubleshooting	31
2.5 E8 Troubleshooting	32
2.6 E9 Troubleshooting	33
2.7 EE/FA/FB Troubleshooting	34
2.8 FD Troubleshooting	35
2.9 FF/P1/H2 Troubleshooting	36
2.10 F8/HE Troubleshooting	37
2.11 F9/L0/L1 Troubleshooting	38
2.12 P2/H5 Troubleshooting	39
2.13 P3 Troubleshooting	40
2.14 P4/H6 Troubleshooting	41
2.15 P5 Troubleshooting	42
2.16 P6 Troubleshooting	43
2.17 P7/PC Troubleshooting	44
2.18 P8 Troubleshooting	45
2.19 P9 Troubleshooting	46
2.20 PD/H3 Troubleshooting	47
2.21 H0 Troubleshooting	48

3. Temperature Sensor Resistance Characteristics 49

1 Error code table

Error code	Error definition
E1	Communication error (Indoor side)
E2	T1- Room temperature sensor fault
E3	T2 -Indoor coil temperature sensor fault
E4	Refrigerant concentration sensor fault
E6	Refrigerant leakage protection
E8	Indoor fan motor current fault
E9	Wired controller communication fault
EE	EEPROM failure (indoor unit)
F0	Communication error(Outdoor side)
F4	T4 - Ambient temperature sensor fault
F5	T5 - Discharge temperature sensor fault
F6	T3 - Coil temperature sensor fault
F7	T7 - refrigerant cooling pipe inlet temperature sensor fault
F8	T7 temp sensor error in detecting condensate risks
F9	AC voltage is too high or too low protection
FA	EEPROM fault (on main PCB)
FB	EEPROM fault (on inverter module)
FC	IPM temperature sensor fault
FD	Pressure sensor fault
FE	T3/T5 temperature sensor loose protection
FF	High pressure switch fault for 20 minutes
H0	Inverter module and main PCB communication error
H1	P5 protection appears 3 times in 180 minutes can't be recovered until re-power on
H2	FF protection appears 3 times in 150 minutes can't be recovered until re-power on
H3	PD protection appears 3 times in 180 minutes can't be recovered until re-power on

H4	P8 protection appears 3 times in 120 minutes can't be recovered until re-power on
H5	P2 protection appears 3 times in 240 minutes can't be recovered until re-power on
H6	P4 protection appears 3 times in 100 minutes can't be recovered until re-power on
H7	PC protection appears 3 times in 200 minutes can't be recovered until re-power on
H8	FE protection appears 3 times in 120 minutes can't be recovered until re-power on
HC	F7 protection appears 3 times in 180 minutes can't be recovered until re-power on
HE	F8 protection appears 3 times in 60 minutes can't be recovered until re-power on
L0	DC bus low voltage protection
L1	DC bus high voltage protection
P1	High pressure switch fault for 4 seconds
P2	Low pressure protection
P3	Over current protection
P4	Discharge temperature protection
P5	T3 high temperature protection in cooling mode
P6	Compressor inverter module protection
P7	Indoor unit anti-freezing protection
P8	IPM high temperature protection
P9	Outdoor fan motor fault
PC	Overwet operation protection
PD	High pressure protection in heating mode
ATL	Ambient temperature out of bounds protection

Other codes

Code	Code Definition
D0	Oil return
Df	Defrost
DC	Force cooling
LA	Frequency limitation by voltage
LB	Frequency limitation or decline by high pressure
LC	Frequency limitation by condenser temp
LD	Frequency limitation by discharge temp
LE	Frequency limitation by IPM modular high temp
LF	Frequency limitation by current
PRH	Crankcase heater preheating, can not start

2 Troubleshooting

2.1 Safety Precautions

The following precautions here are quite important, so be sure to follow them carefully. Read these instructions carefully before installation. Keep this manual in a handy for future preference.

Failure to adhere to all precautionary measures listed in this section may result in personal injury, damage to the unit or to property, or in extreme cases, death.



WARNING

- Indicates a potentially hazardous situation which if not avoided, could result in death or serious injury.



CAUTION

- Indicates a potentially hazardous situation which if not avoided, may result in minor or moderate injury.
- It is also used to alert against unsafe practices.

2.1.1 In case of Accidents or Emergency



WARNING

- If a gas leak is suspected, immediately turn off the gas and ventilate the area if a gas leak is suspected before turning the unit on.
- If strange sounds or smoke is detected from the unit, turn the breaker off and disconnect the power supply cable.
- If the unit comes into contact with liquid, contact an authorized service center.
- If liquid from the batteries makes contact with skin or clothing, immediately rinse or wash the area well with clean water.
- Do not insert hands or other objects into the air inlet or outlet while the unit is plugged in.
- Do not operate the unit with wet hands.
- Do not use a remote controller that has previously been exposed to battery damage or battery leakage.



CAUTION

- Clean and ventilate the unit at regular intervals when operating it near a stove or near similar devices.
- Do not use the unit during severe weather conditions. If possible, remove the product from the window before such occurrences.

2.1.2 Information servicing(For flammable materials)



WARNING

- Use this unit only on a dedicated circuit.
 - Damage to the installation area could cause the unit
 - to fall, potentially resulting in personal injury, property damage, or product failure.
 - Only qualified personnel should disassemble, install, remove, or repair the unit.
 - Only a qualified electrician should perform electrical work. For more information, contact your dealer, seller, or an authorized service center.
-



CAUTION

- While unpacking be careful of sharp edges around the unit as well as the edges of the fins on the condenser and evaporator.

2.1.3 Operation and Maintenance



WARNING

- Do not use defective or under-rated circuit breakers.
- Ensure the unit is properly grounded and that a dedicated circuit and breaker are installed.
- Do not modify or extend the power cable. Ensure the power cable is secure and not damaged during operation.
- Do not unplug the power supply plug during operation.
- Do not store or use flammable materials near the unit.
- Do not open the inlet grill of the unit during operation.
- Do not touch the electrostatic filter if the unit is equipped with one.
- Do not block the inlet or outlet of air flow to the unit.
- Do not use harsh detergents, solvents, or similar items to clean the unit. Use a soft cloth for cleaning.
- Do not touch the metal parts of the unit when removing the air filter as they are very sharp.
- Do not step on or place anything on the unit or outdoor units.
- Do not drink water drained from the unit.
- Avoid direct skin contact with water drained from the unit.

- Use a firm stool or step ladder according to manufacturer procedures when cleaning or maintaining the unit.



CAUTION


- Do not install or operate the unit for an extended period of time in areas of high humidity or in an environment directly exposing it to sea wind or salt spray.
- Do not install the unit on a defective or damaged installation stand, or in an unsecured location.
- Ensure the unit is installed at a level position
- Do not install the unit where noise or air discharge
- Created by the outdoor unit will negatively impact the environment or nearby residences.
- Do not expose skin directly to the air discharged by the unit for prolonged periods of time.
- Ensure the unit operates in areas waterOr other liquids.
- Ensure the drain hose is installed correctly to ensure proper water drainage.
- When lifting or transporting the unit, it is recommended that two or more people are used for this task.
- When the unit is not to be used for an extended time, disconnect the power supply or turn off the breaker.

2.2 ATL Troubleshooting

- ATL indicates ambient temperature out of bounds protection.
- The unit stops running and will not start operating until the ambient temperature returns to the allowable temperature range, error code is displayed on the communication board.
- The allowable ambient temperature range is 5~125°F (-15~52°C).


2.3 E1/F0 Troubleshooting

- E1 indicates RS485 communication error(indoor side).
- F0 indicates RS485 communication error(outdoor side).
- The unit stops running and error code is displayed on the communication board

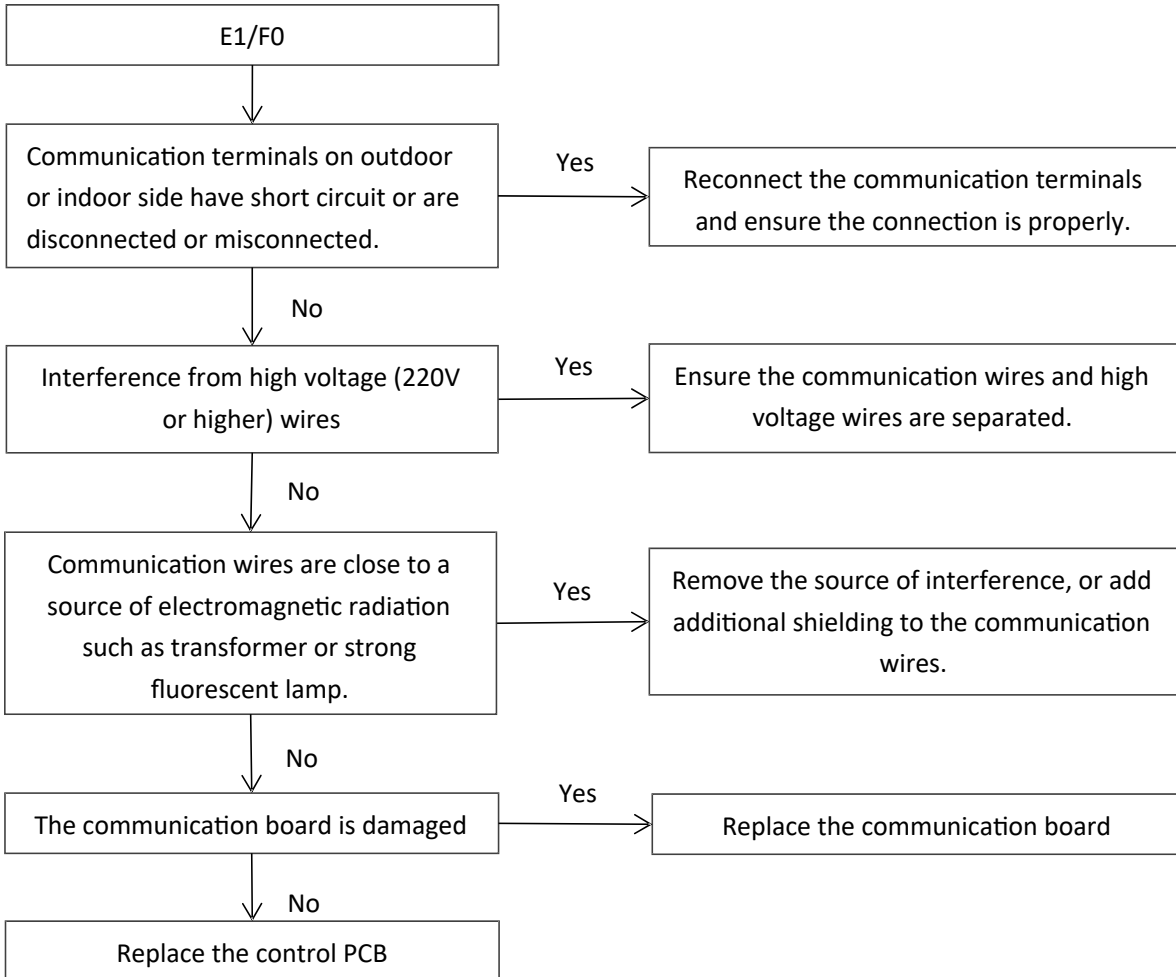

2.4 E2/E3/F4/F5/F6/F7/FC/FE/H8 Troubleshooting

- E2 indicates indoor unit T1-roomtemperature sensor fault
- E3 indicates indoor unit T2-indoor coil temperature sensor fault
- F4 indicates T4-ambient temperature sensor fault
- F5 indicates T5-discharge temperature sensor fault
- F6 indicates T3-outdoor coil temperature sensor fault
- F7 indicates T7-refrigerant cooling pipe inlet temperature sensor fault
- FC indicates IPM temperature sensor fault
- FE indicates T3/TP temperature sensor loose protection
- H8 indicates FE protection appears 3 times in 120 minutes can't be recovered until re-power on.
- The unit stops running and error code is displayed on the communication board

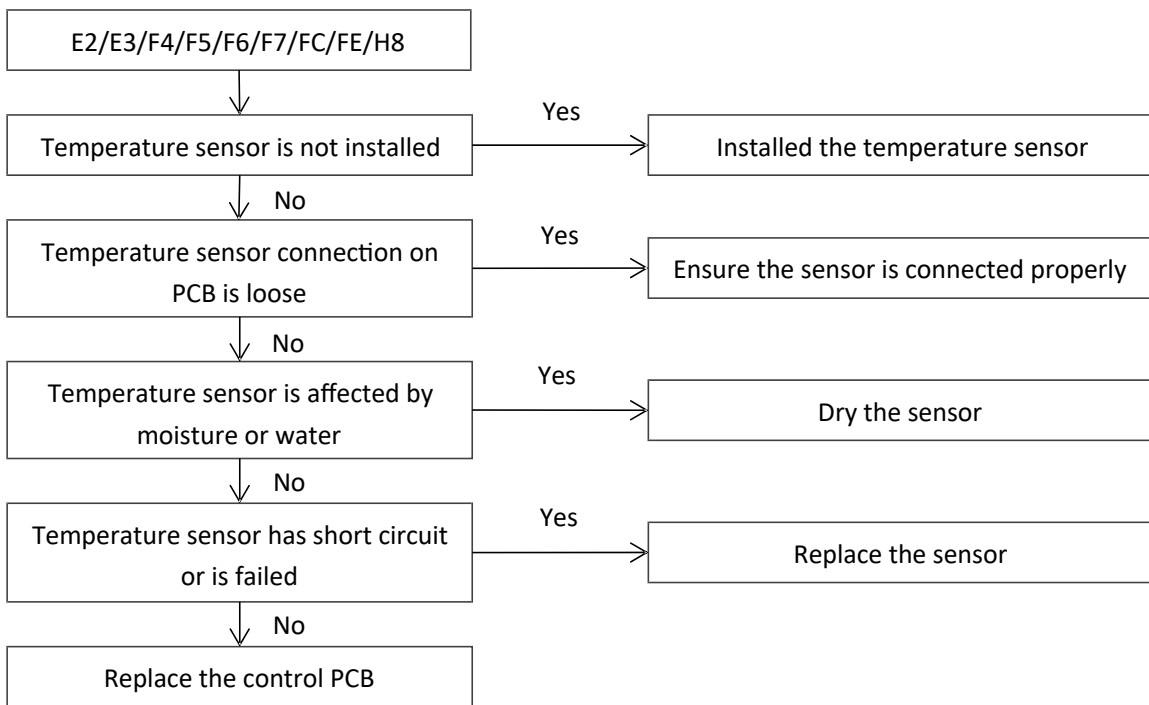


Note:

- 1) Measure sensor resistance. If the resistance is too low, the sensor has short-circuited. If the resistance is not consistent with the sensor's resistance characteristics table, the sensor has failed.
- 2) E2/E3 is applicable only when communication is established between the ComfortStar outdoor unit and the ComfortStar indoor unit via RS-485.


2.5 E8 Troubleshooting

- E8 indicates indoor fan motor current fault.
- The unit stops running and error code is displayed on the communication board

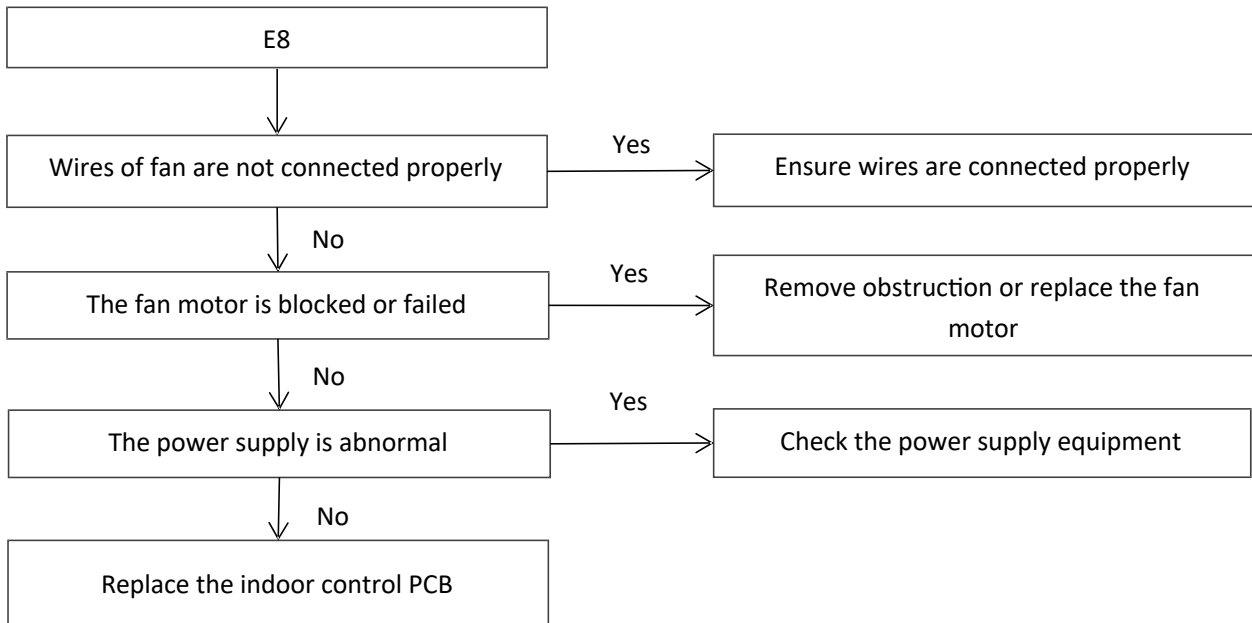


2.6 E9 Troubleshooting

- E9 indicates wired controller communication fault.
- The unit stops running and error code is displayed on the communication board

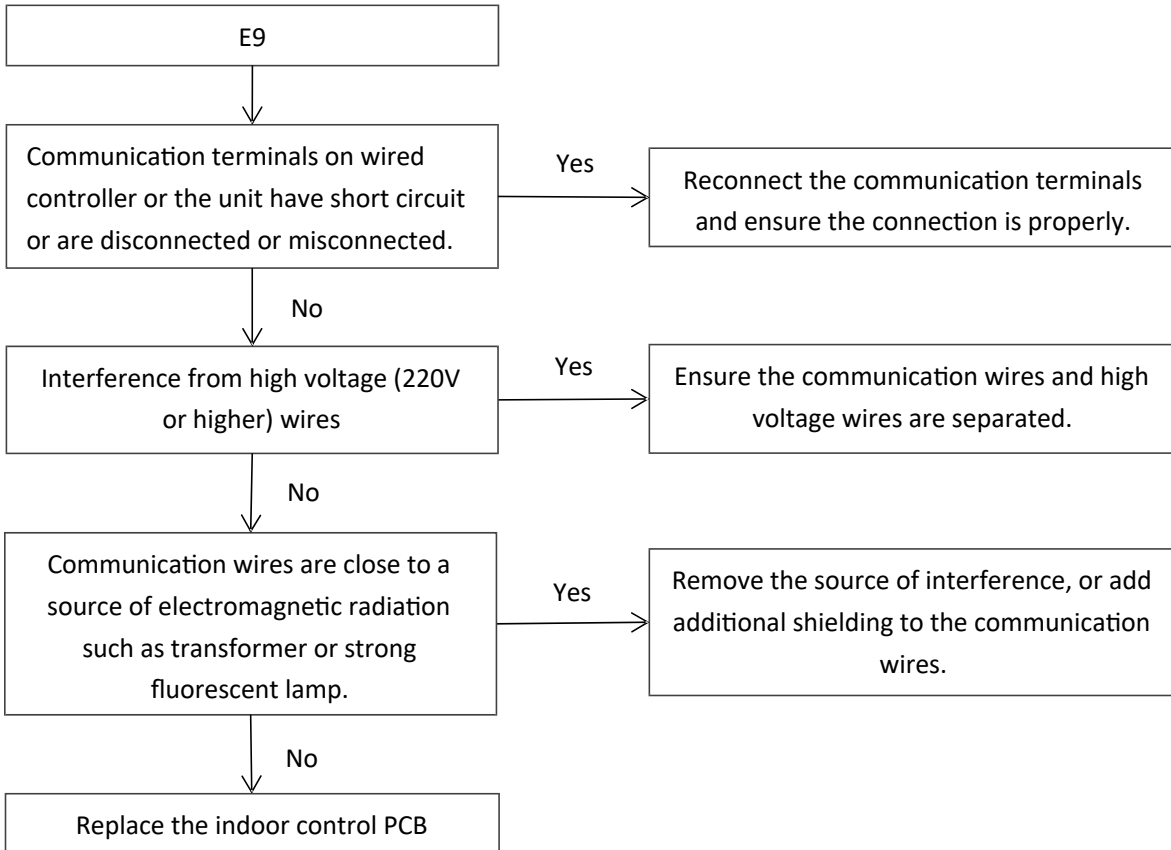


2.7 EE/FA/FB Troubleshooting

- EE indicates EEPROM fault (indoor unit)
- FA indicates EEPROM fault on the main PCB
- FB indicates EEPROM fault on the inverter module
- The unit stops running and error code is displayed on the communication board

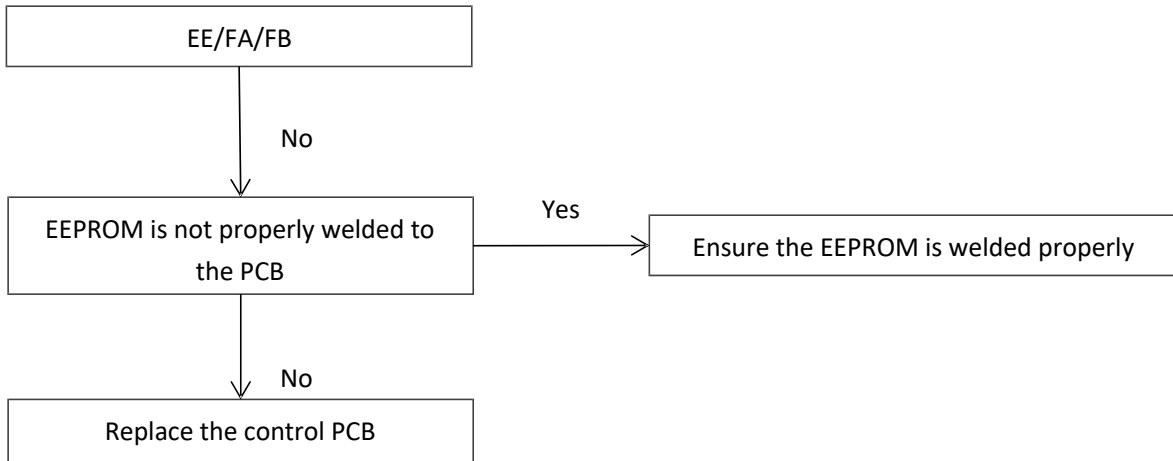


2.8 FD Troubleshooting

- FD indicates pressure sensor fault
- The unit stops running and error code is displayed on the communication board

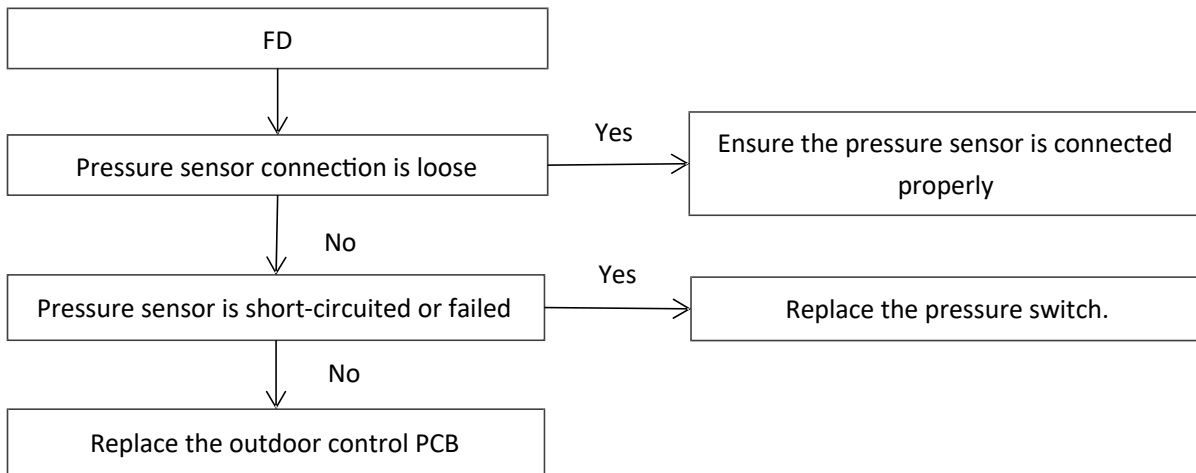


2.9 FF/P1/H2 Troubleshooting

- FF indicates high pressure switch fault for 20 minutes.
- P1 indicates high pressure switch fault for 4 seconds.
- H2 indicates FF protection appears 3 times in 150 minutes can't be recovered until re-power on.
- The unit stops running and error code is displayed on the communication board

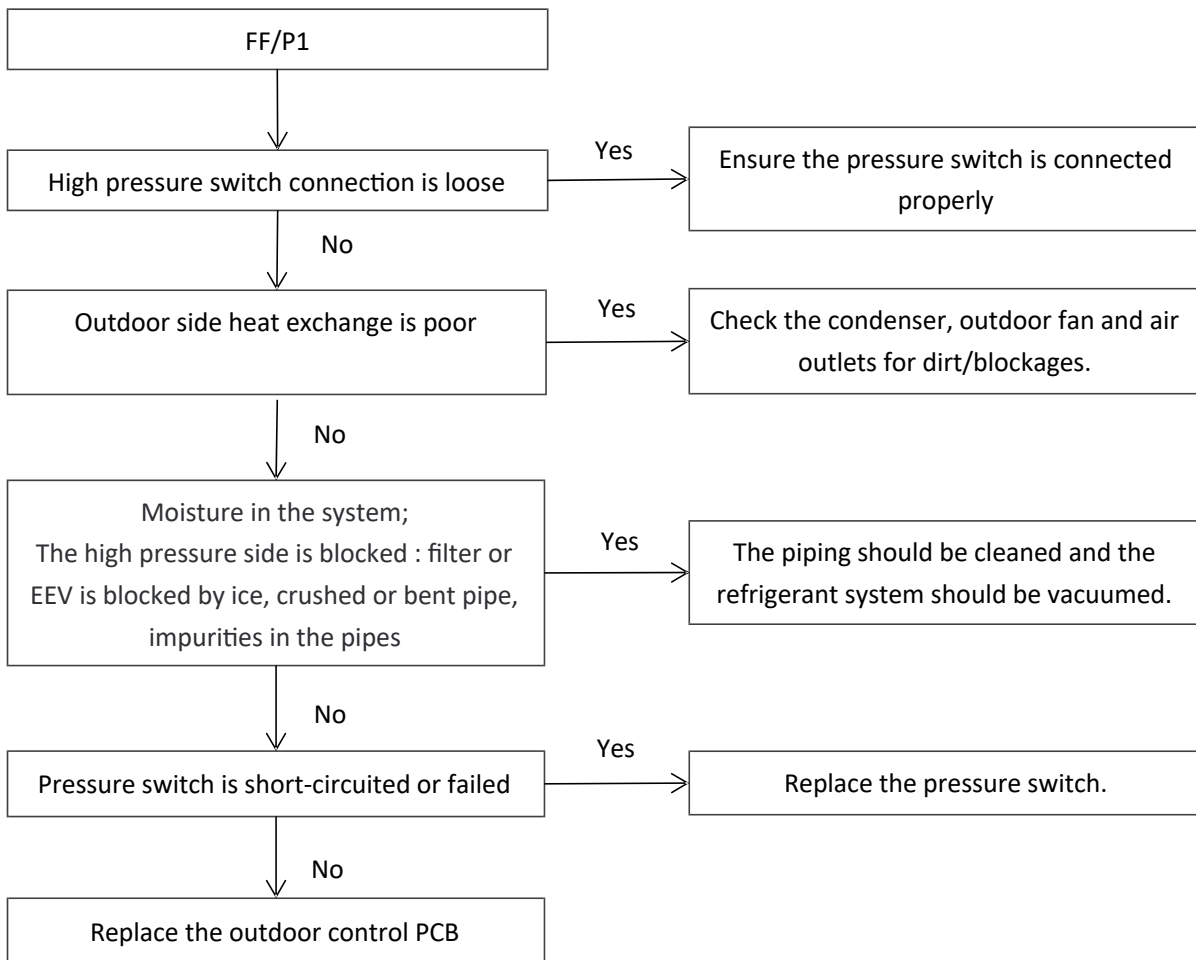

2.10 F8/HE Troubleshooting

- FF indicates T7 temp sensor error in detecting condensate risks.
- HE indicates F8F protection appears 3 times in 60 minutes can't be recovered until re-power on.
- The unit stops running and error code is displayed on the communication board

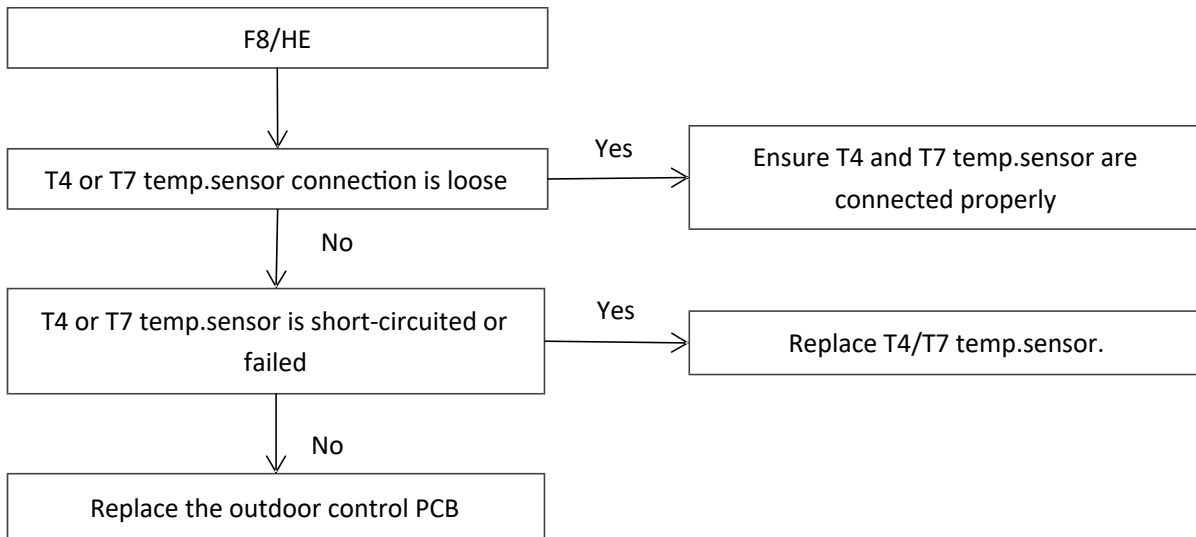


2.11 F9/L0/L1 Troubleshooting

- F9 indicates AC voltage is too high or too low protection
- L0 indicates DC bus low voltage protection
- L1 indicates DC bus high voltage protection


Allowable voltage range of power source	178~265V
Upper limit of DC generatrix voltage	430V
Lower limit of DC generatrix voltage	150V

- The unit stops running and error code is displayed on the communication board

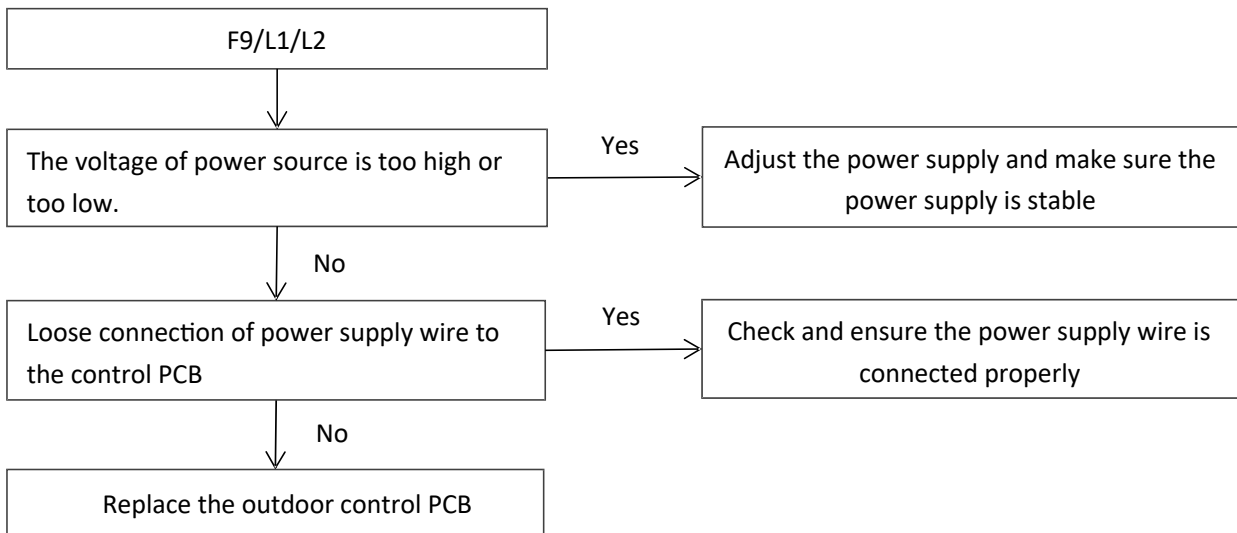


2.12 P2/H5 Troubleshooting

- P2 indicates low pressure protection .
- H5 indicates P2 protection appears 3 times in 240 minutes can't be recovered until re-power on.
- The unit stops running and error code is displayed on the communication board

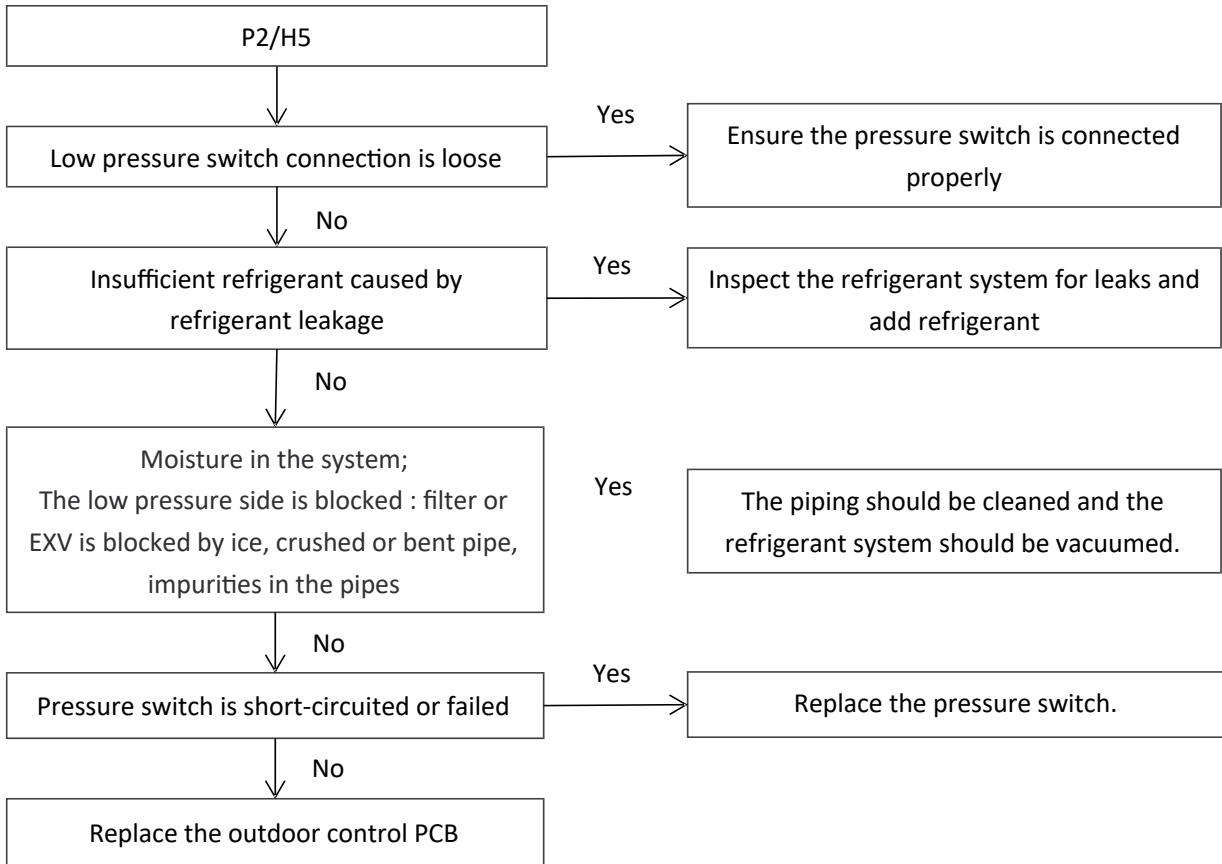


2.13 P3 Troubleshooting

- P3 indicates over current protection
- The unit stops running and error code is displayed on the communication board

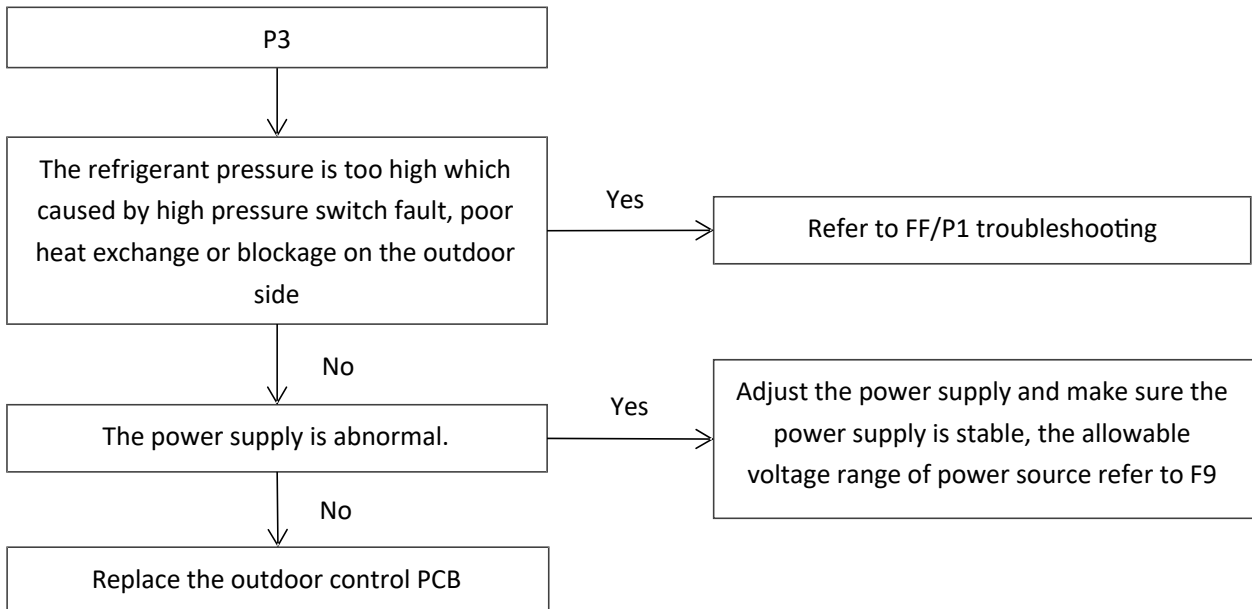


2.14 P4/H6 Troubleshooting

- P4 indicates discharge temperature protection
- H6 indicates P4 protection appears 3 times in 100 minutes can't be recovered until re-power on.
- The unit stops running and error code is displayed on the communication board.

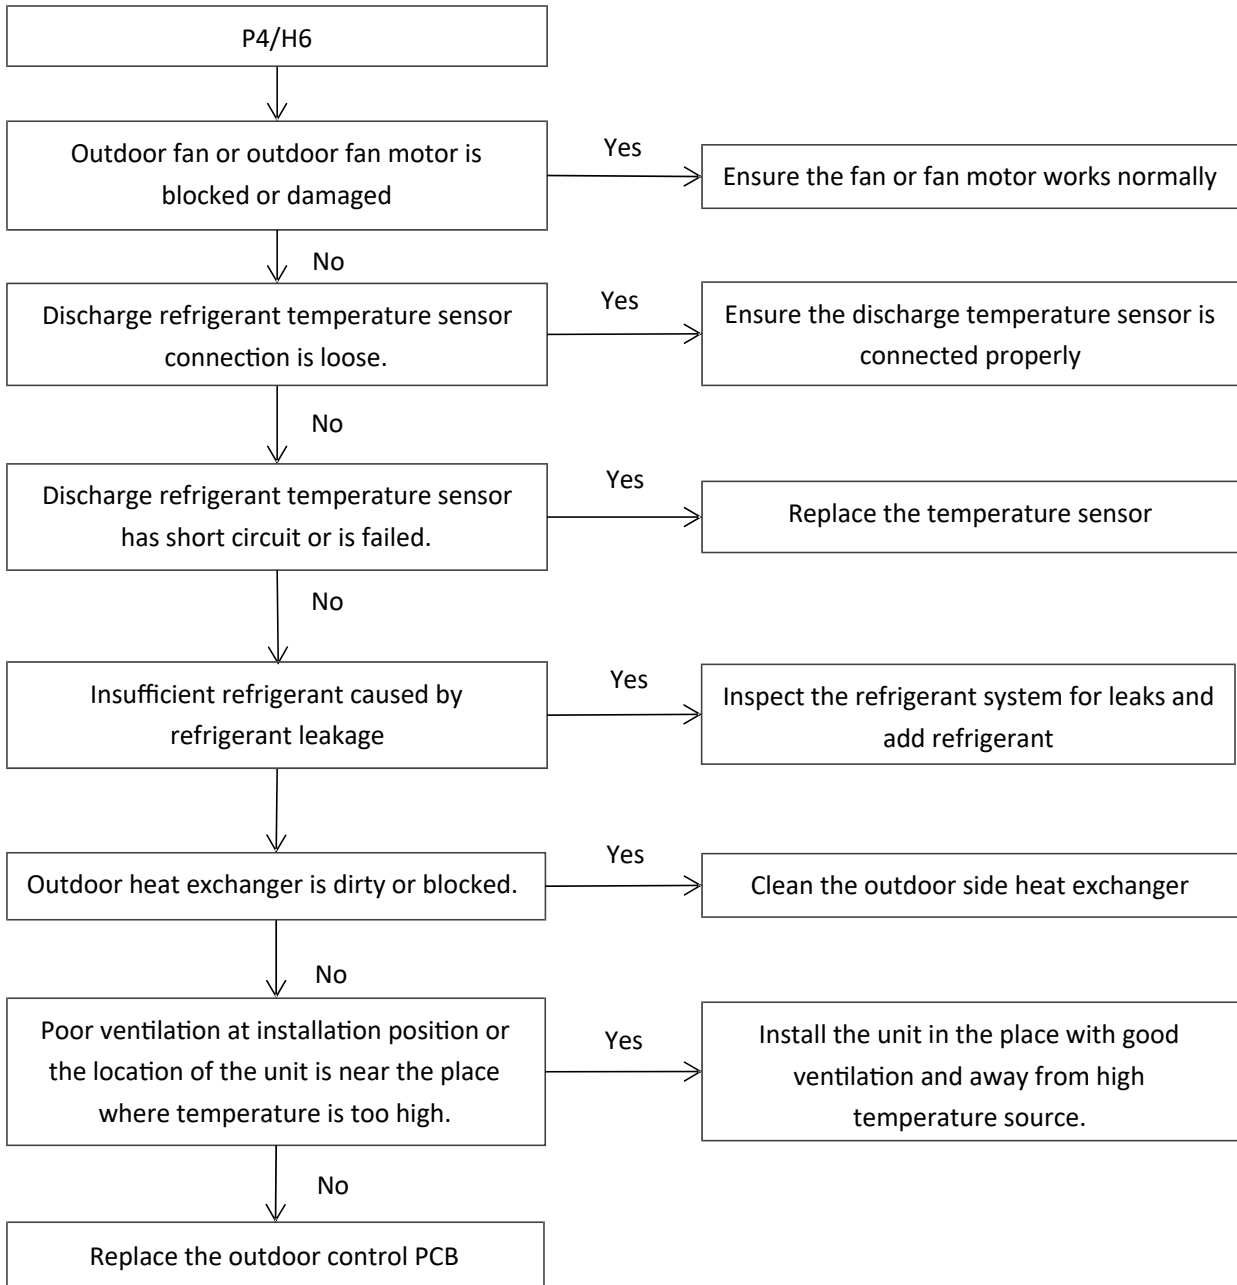

2.15 P5 Troubleshooting


- P5 indicates T3 high temperature protection in cooling mode
- The unit stops running and error code is displayed on the communication board.

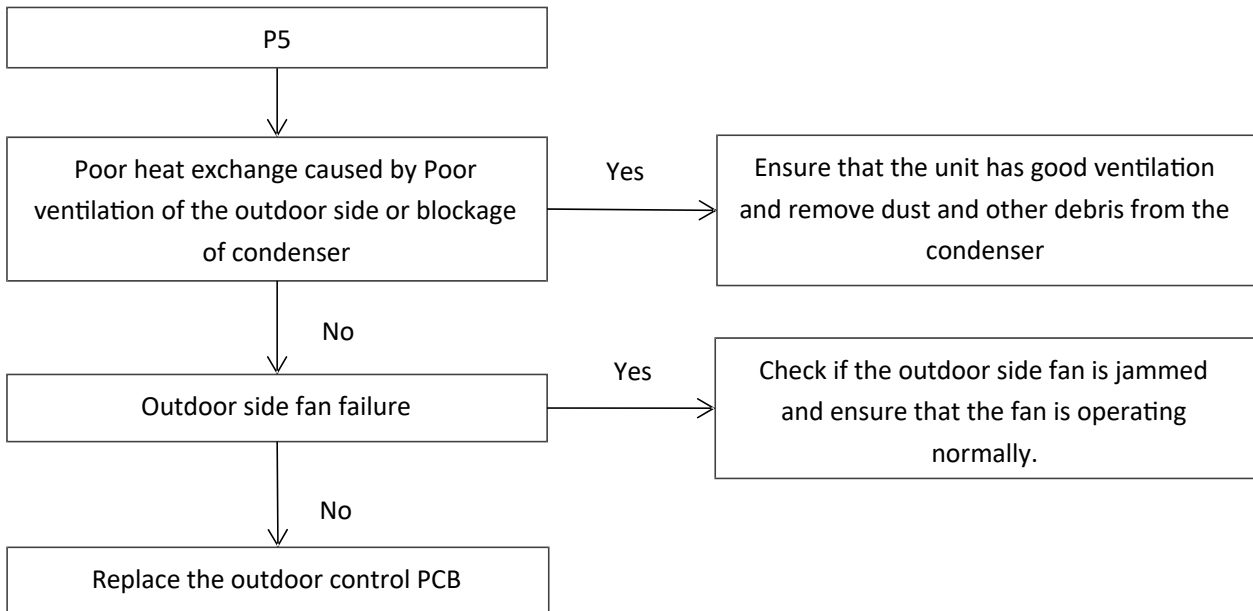


2.16 P6 Troubleshooting

- P6 indicates compressor inverter module protection.
- The unit stops running and error code is displayed on the communication board.


Situation1: P6 appears immediately when the outdoor unit is powered-on

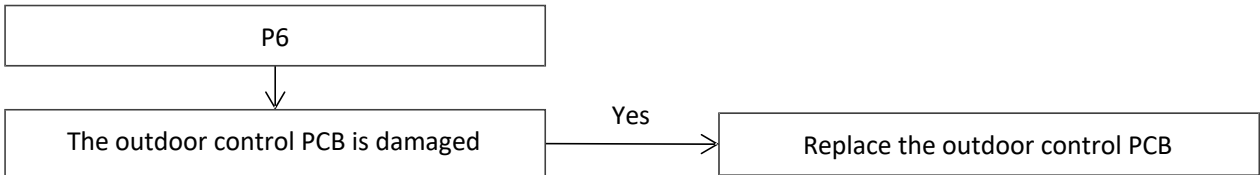

Situation2: P6 appears immediately after the compressor starts up

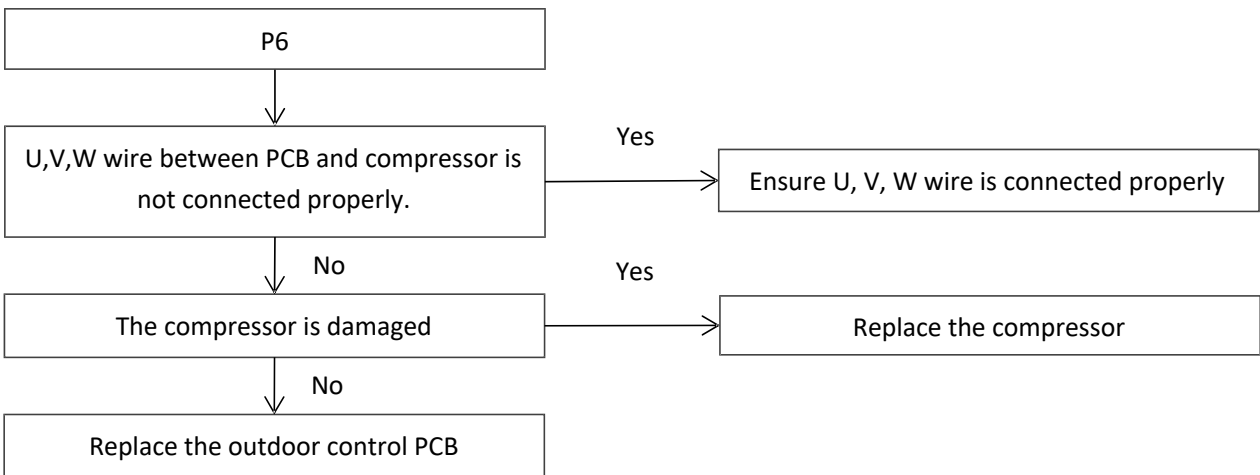


Situation3: P6 appears after the compressor has been running for a period of time.

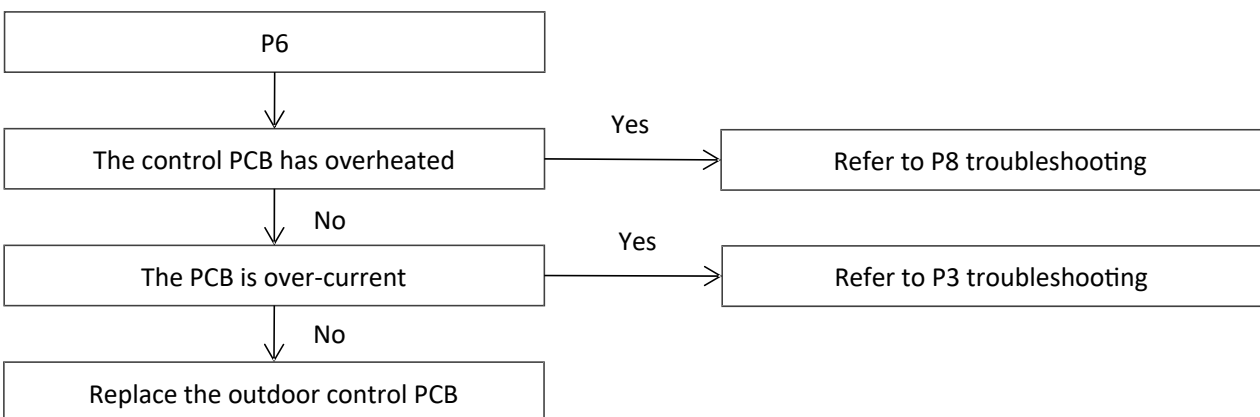


2.17 P7/PC Troubleshooting

- P7 indicates Indoor unit anti-freezing protection.
- PC indicates overwet operation protection.
- The unit stops running and error code is displayed on the communication board.

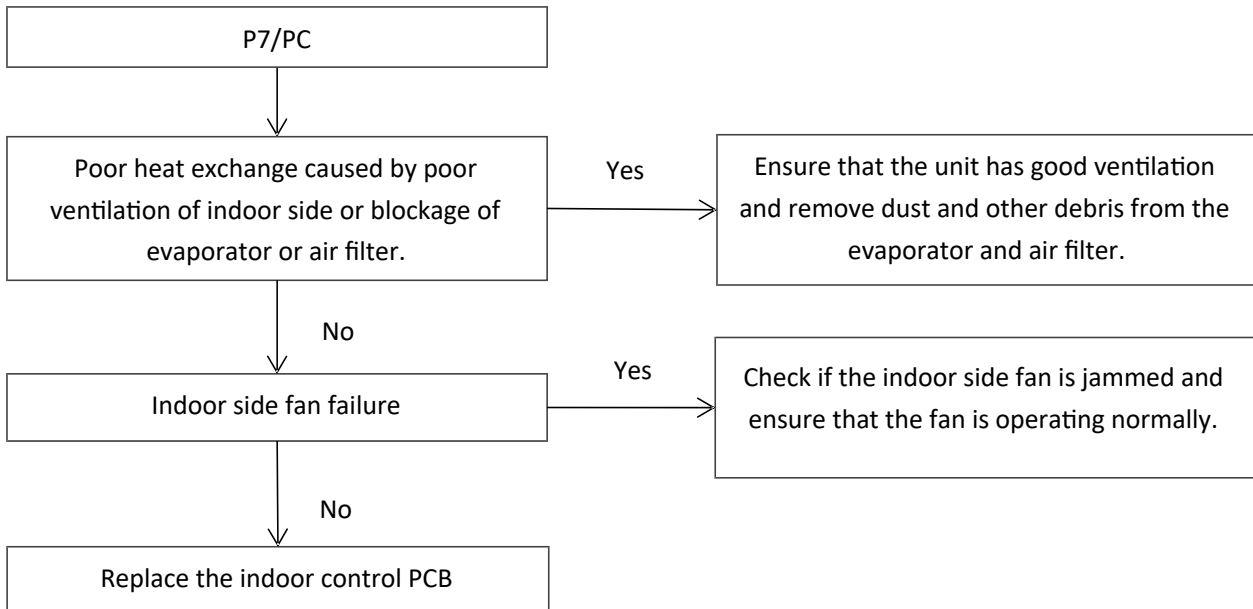


2.18 P8 Troubleshooting

- P8 indicates IPM high temperature protection.
- The unit stops running and error code is displayed on the communication board.

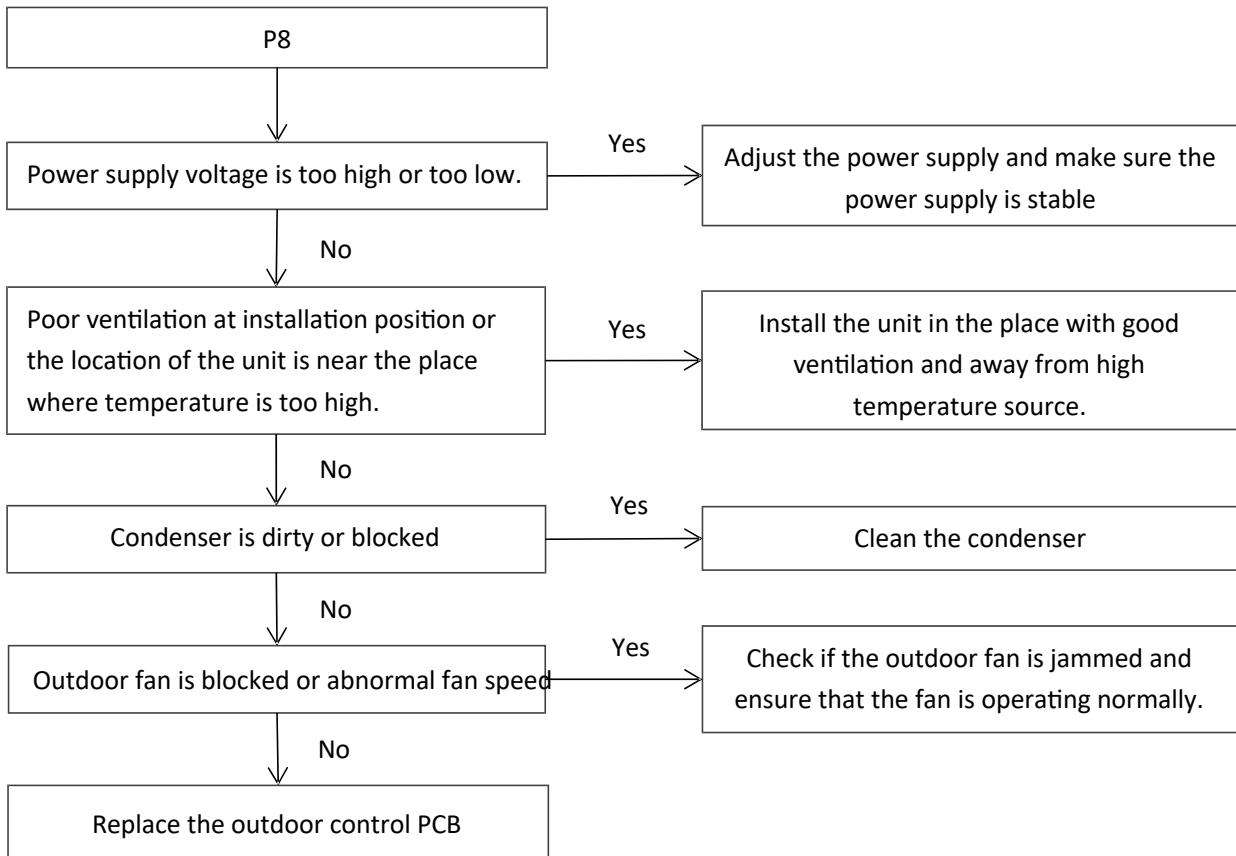


2.19 P9 Troubleshooting

- P9 indicates outdoor fan motor fault
- The unit stops running and error code is displayed on the communication board.

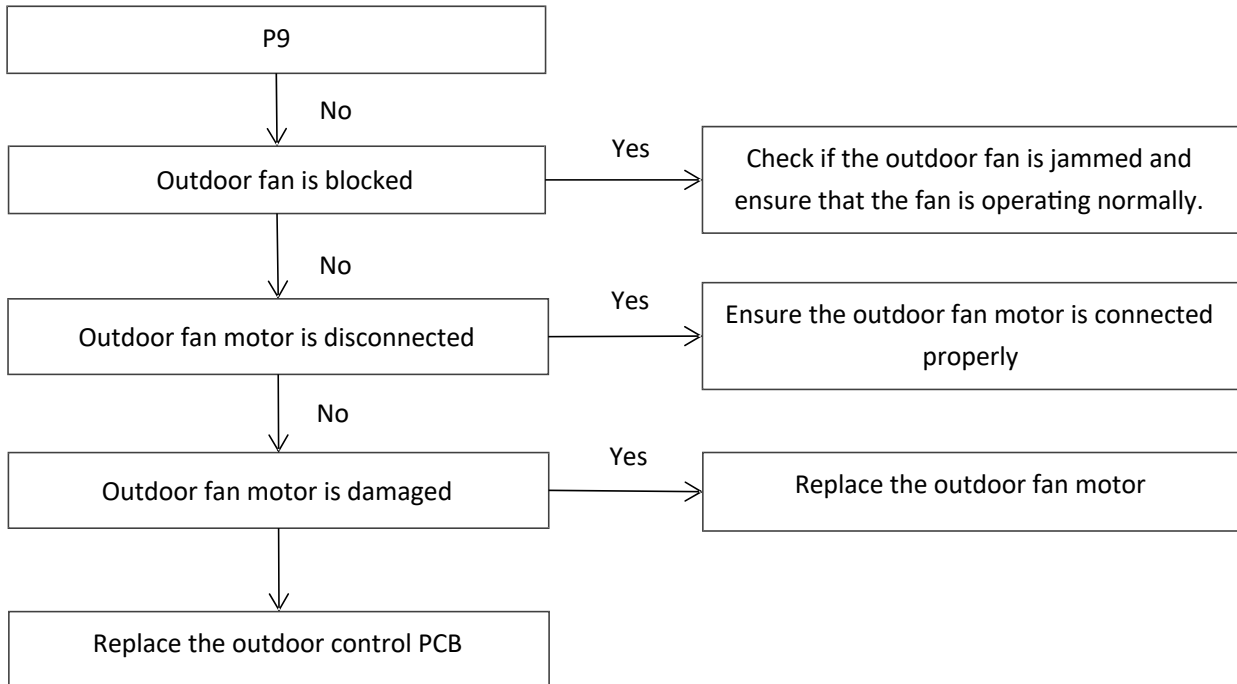

2.20 PD/H3 Troubleshooting

- PD indicates high pressure protection in heating mode
- H3 indicates PD protection appears 3 times in 180 minutes can't be recovered until re-power on
- The unit stops running and error code is displayed on the communication board.

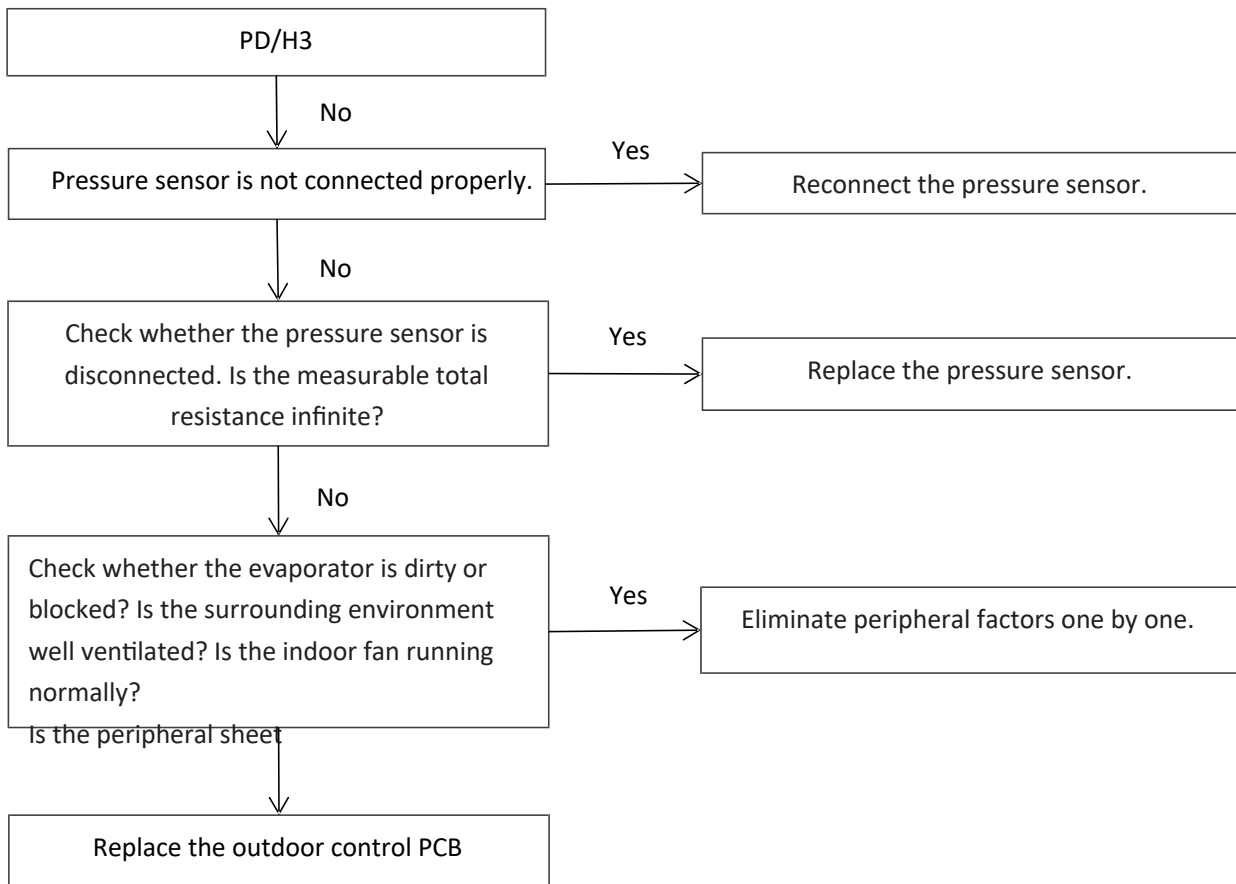

2.21 H0 Troubleshooting

- H0 indicates Communication fault of master board and driver chip
- The unit stops running and error code is displayed on the communication board.

There is only one control PCB in the electric control box which integrates the functions of main control board and inverter module, maintenance personnel has to replace the PCB when H0 fault occurs.

3. Temperature Sensor Resistance Characteristics

Outdoor ambient temperature sensor(T4) and condenser coil temperature sensor(T3) resistance characteristics.

Temperature (°C)	Resistance (kΩ)	Temperature (°C)	Resistance (kΩ)	Temperature (°C)	Resistance (kΩ)	Temperature (°C)	Resistance (kΩ)
-25	144.266	15	16.079	55	2.841	95	0.708
-24	135.601	16	15.313	56	2.734	96	0.686
-23	127.507	17	14.588	57	2.632	97	0.666
-22	119.941	18	13.902	58	2.534	98	0.646
-21	112.867	19	13.251	59	2.44	99	0.627
-20	106.732	20	12.635	60	2.35	100	0.609
-19	100.552	21	12.05	61	2.264	101	0.591
-18	94.769	22	11.496	62	2.181	102	0.574
-17	89.353	23	10.971	63	2.102	103	0.558
-16	84.278	24	10.473	64	2.026	104	0.542
-15	79.521	25	10	65	1.953	105	0.527
-14	75.059	26	9.551	66	1.883		
-13	70.873	27	9.125	67	1.816		
-12	66.943	28	8.721	68	1.752		
-11	63.252	29	8.337	69	1.69		
-10	59.784	30	7.972	70	1.631		
-9	56.524	31	7.625	71	1.574		
-8	53.458	32	7.296	72	1.519		
-7	50.575	33	6.982	73	1.466		
-6	47.862	34	6.684	74	1.416		
-5	45.308	35	6.401	75	1.367		
-4	42.903	36	6.131	76	1.321		
-3	40.638	37	5.874	77	1.276		
-2	38.504	38	5.63	78	1.233		
-1	36.492	39	5.397	79	1.191		
0	34.596	40	5.175	80	1.151		
1	32.807	41	4.964	81	1.113		
2	31.12	42	4.763	82	1.076		
3	29.528	43	4.571	83	1.041		
4	28.026	44	4.387	84	1.007		
5	26.608	45	4.213	85	0.974		
6	25.268	46	4.046	86	0.942		
7	24.003	47	3.887	87	0.912		
8	22.808	48	3.735	88	0.883		
9	21.678	49	3.59	89	0.855		
10	20.61	50	3.451	90	0.828		
11	19.601	51	3.318	91	0.802		
12	18.646	52	3.191	92	0.777		
13	17.743	53	3.069	93	0.753		
14	16.888	54	2.952	94	0.73		

Compressor exhaust temperature sensor (T5) resistance characteristics.

Temperature (°C)	Resistance (kΩ)	Temperature (°C)	Resistance (kΩ)	Temperature (°C)	Resistance (kΩ)	Temperature (°C)	Resistance (kΩ)
-20	542.7	20	68.66	60	13.59	100	3.702
-19	511.9	21	65.62	61	13.11	101	3.595
-18	483	22	62.73	62	12.65	102	3.492
-17	455.9	23	59.98	63	12.21	103	3.392
-16	430.5	24	57.37	64	11.79	104	3.296
-15	406.7	25	54.89	65	11.38	105	3.203
-14	384.3	26	52.53	66	10.99	106	3.113
-13	363.3	27	50.28	67	10.61	107	3.025
-12	343.6	28	48.14	68	10.25	108	2.941
-11	325.1	29	46.11	69	9.902	109	2.86
-10	307.7	30	44.17	70	9.569	110	2.781
-9	291.3	31	42.33	71	9.248	111	2.704
-8	275.9	32	40.57	72	8.94	112	2.63
-7	261.4	33	38.89	73	8.643	113	2.559
-6	247.8	34	37.3	74	8.358	114	2.489
-5	234.9	35	35.78	75	8.084	115	2.422
-4	222.8	36	34.32	76	7.82	116	2.357
-3	211.4	37	32.94	77	7.566	117	2.294
-2	200.7	38	31.62	78	7.321	118	2.233
-1	190.5	39	30.36	79	7.086	119	2.174
0	180.9	40	29.15	80	6.859	120	2.117
1	171.9	41	28	81	6.641	121	2.061
2	163.3	42	26.9	82	6.43	122	2.007
3	155.2	43	25.86	83	6.228	123	1.955
4	147.6	44	24.85	84	6.033	124	1.905
5	140.4	45	23.89	85	5.844	125	1.856
6	133.5	46	22.89	86	5.663	126	1.808
7	127.1	47	22.1	87	5.488	127	1.762
8	121	48	21.26	88	5.32	128	1.717
9	115.2	49	20.46	89	5.157	129	1.674
10	109.8	50	19.69	90	5	130	1.632
11	104.6	51	18.96	91	4.849		
12	99.69	52	18.26	92	4.703		
13	95.05	53	17.58	93	4.562		
14	90.66	54	16.94	94	4.426		
15	86.49	55	16.32	95	4.294		
16	82.54	56	15.73	96	4.167		
17	78.79	57	15.16	97	4.045		
18	75.24	58	14.62	98	3.927		
19	71.86	59	14.09	99	3.812		

Room temperature sensor(T1) and condenser coil temperature sensor(T2) resistance characteristics.

Temperature (°C)	Resistance (kΩ)	Temperature (°C)	Resistance (kΩ)	Temperature (°C)	Resistance (kΩ)	Temperature (°C)	Resistance (kΩ)
-25	144.266	15	16.079	55	2.841	95	0.708
-24	135.601	16	15.313	56	2.734	96	0.686
-23	127.507	17	14.588	57	2.632	97	0.666
-22	119.941	18	13.902	58	2.534	98	0.646
-21	112.867	19	13.251	59	2.44	99	0.627
-20	106.732	20	12.635	60	2.35	100	0.609
-19	100.552	21	12.05	61	2.264	101	0.591
-18	94.769	22	11.496	62	2.181	102	0.574
-17	89.353	23	10.971	63	2.102	103	0.558
-16	84.278	24	10.473	64	2.026	104	0.542
-15	79.521	25	10	65	1.953	105	0.527
-14	75.059	26	9.551	66	1.883		
-13	70.873	27	9.125	67	1.816		
-12	66.943	28	8.721	68	1.752		
-11	63.252	29	8.337	69	1.69		
-10	59.784	30	7.972	70	1.631		
-9	56.524	31	7.625	71	1.574		
-8	53.458	32	7.296	72	1.519		
-7	50.575	33	6.982	73	1.466		
-6	47.862	34	6.684	74	1.416		
-5	45.308	35	6.401	75	1.367		
-4	42.903	36	6.131	76	1.321		
-3	40.638	37	5.874	77	1.276		
-2	38.504	38	5.63	78	1.233		
-1	36.492	39	5.397	79	1.191		
0	34.596	40	5.175	80	1.151		
1	32.807	41	4.964	81	1.113		
2	31.12	42	4.763	82	1.076		
3	29.528	43	4.571	83	1.041		
4	28.026	44	4.387	84	1.007		
5	26.608	45	4.213	85	0.974		
6	25.268	46	4.046	86	0.942		
7	24.003	47	3.887	87	0.912		
8	22.808	48	3.735	88	0.883		
9	21.678	49	3.59	89	0.855		
10	20.61	50	3.451	90	0.828		
11	19.601	51	3.318	91	0.802		
12	18.646	52	3.191	92	0.777		
13	17.743	53	3.069	93	0.753		
14	16.888	54	2.952	94	0.73		



The design and specifications are subject to change without prior notice for product improvement. Consult with the sales agency or manufacturer for details.